


nifty

150T

Operating and Safety Instructions

MODEL 150T SERIES

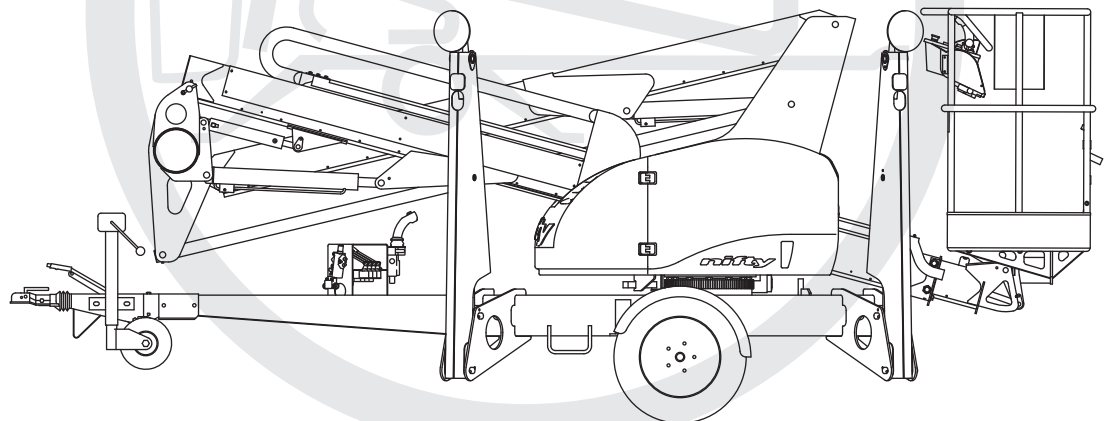

niftylift.com
info@niftylift.com

M50141/09



Niftylift Limited

Chalkdell Drive
Shenley Wood
Milton Keynes
MK5 6GF
England

www.niftylift.com
e-mail: info@niftylift.com
Tel: +44 (0)1908 223456
Fax: +44 (0)1908 312733

Table of Contents

1	Introduction and General Information	2
1.1	FOREWORD	2
1.2	SCOPE	3
1.3	INTRODUCING THE 150T TRAILER MOUNT (TM) SERIES	3
1.4	GENERAL SPECIFICATION	4
1.5	IDENTIFICATION (UK PLATE)	5
1.6	EC DECLARATION OF CONFORMITY (Typical).....	6
2	Safety	7
2.1	MANDATORY PRECAUTIONS.....	7
2.2	ENVIRONMENTAL LIMITATIONS	10
2.3	NOISE AND VIBRATION.....	11
2.4	TEST REPORT	11
3	Preparation and Inspection	12
3.1	UNPACKING	12
3.2	PREPARATION FOR USE.....	12
3.3	PRE-OPERATIONAL SAFETY CHECK SCHEDULES.....	13
3.4	PLACARD, DECALS & INSTALLATION (UK).....	15
3.5	TORQUE REQUIREMENTS.....	18
4	Operation	19
4.1	CONTROL CIRCUIT COMPONENTS	19
4.2	SETTING UP PROCEDURES	20
4.3	GROUND CONTROL OPERATION	21
4.4	PLATFORM CONTROL OPERATION.....	23
4.5	CAGE WEIGH SYSTEM.....	25
4.6	BATTERIES AND CHARGING.....	26
4.7	TRANSPORTING, TOWING, CRANEAGE, STORAGE, SETTING TO WORK	29
4.8	TRACTION DRIVE POSITIONING SYSTEM.....	33
5	Emergency Controls	35
5.1	GENERAL	35
5.2	IN THE EVENT OF AN INCAPACITATED OPERATOR.....	35
5.3	IN THE EVENT OF MACHINE FAILURE	35
5.4	INCIDENT NOTIFICATION	35
6	Responsibilities	36
6.1	CHANGES IN OWNERSHIP	36
6.2	MANUAL OF RESPONSIBILITIES	36
6.3	INSPECTION/SERVICE/PRE-HIRE CHECK LIST	37
Appendix A		39
	Safety Related Parts of the Control System (SRP/CS)	42

1 Introduction and General Information

1.1 FOREWORD

The purpose of these manuals is to provide the customer with appropriate safety operating and maintenance instructions essential for proper machine operation.

All information in these manuals should be **READ** and fully **UNDERSTOOD** before any attempt is made to operate the machine. **THESE MANUALS ARE VERY IMPORTANT TOOLS** - Keep them with the machine at all times.

The manufacturer has no direct control over machine application and use, therefore conformance with good safety practices is the responsibility of the user and his operating personnel.

All information in these manuals is based on the use of the machine under proper operating conditions. Alteration and/or modification of the machine are strictly forbidden.

One of the most important facts to remember is that any equipment is only as safe as those who operate it.

DANGER, WARNING, CAUTION, IMPORTANT, INSTRUCTIONS AND NOTICE

Any place these topics may appear, either in this manual or on the machine, are defined as follows:

DANGER: If not correctly followed there is a high probability of serious injury or death to personnel.

WARNING OR CAUTION: If not correctly followed there is some possibility of serious injury or death to personnel.



THE 'SAFETY ALERT' SYMBOL IS USED TO CALL ATTENTION TO POTENTIAL HAZARDS THAT MAY LEAD TO SERIOUS INJURY OR DEATH, IF IGNORED.

IMPORTANT AND INSTRUCTIONS: Denotes procedures essential to safe operation and prevention of damage to or destruction of the machine.

NOTICE: Indicates general safety rules and/or procedures relating to the machine.

It is the owner's/user's responsibility to know and comply with all applicable rules, regulations, laws, codes and any other requirements applicable to the safe use of this equipment.

1.2 SCOPE

These operating instructions contain all the necessary information required to allow the safe operation of any Niftylift 150T (TM42T), powered by bi-energy, electric (DC), diesel (D) and petrol/gasoline (P) engine.

For further technical information, circuit diagrams and specific instructions for all maintenance which may need to be carried out by specialist trained personnel, see the associated Workshop and Parts manual for your model of Niftylift 150T (TM42T).

1.3 INTRODUCING THE 150T TRAILER MOUNT (TM) SERIES

Please note at the time of going to press all information, illustrations, details and descriptions contained herein are valid. Niftylift reserves the right to change, alter, modify or improve its products without any obligations to install them on previously manufactured machines.

If you require further information after reading this manual, please do not hesitate to contact us.

Niftylift Ltd, Chalkdell Drive, Shenley Wood, Milton Keynes MK5 6GF, Great Britain

Tel: +44 (0) 1908 223456 Fax: +44 (0) 1908 312733

Niftylift Inc, 1525 S. Buncombe Road, Greer, SC 29651 USA

Tel: +01 864 968 8881 Fax: +01 864 968 8836

Nifty Pty Ltd, 11 Kennington Drive, Tomago, NSW 2322, Australia

Tel: +61 (0) 2 4964 9765 Fax: +61 (0) 2 4964 9714

The Niftylift 150T trailer mount is an extremely versatile articulated boom platform of unique and simple design. It is capable of placing two men and their tools up to a height of 14.65m (48ft) or an outreach of 7.53m (24ft 8in).

The booms are mounted via a 400° powered swing mechanism onto a compact base mounted on a single axle. The fully articulating booms give an outstanding working envelope. The large pneumatic wheels and minimal weight make the unit light and simple to manoeuvre.

A simple, all-hydraulic proportional control system gives smooth, reliable movement of the platform and maximum reliability in the harshest environments.

The Niftylift 150T is available with hydraulically powered outriggers, making setting up both swift and simple. A unique pressure sensitive microswitch system fitted to each outrigger prevents operation of the booms until all outriggers have been correctly deployed. This Operating Manual provides instructions for the hydraulic outriggers.

Models include the following:

E: - DC ELECTRIC (BATTERY)

AC: - AC ELECTRIC (MAINS)

D: - DIESEL

ACE: - AC & DC ELECTRIC

DAC: - DIESEL & AC ELECTRIC

DE: - BI-ENERGY (DIESEL & BATTERY)

PE: - BI-ENERGY (PETROL & BATTERY)


P: - PETROL

PAC: - PETROL & AC ELECTRIC

1.4 GENERAL SPECIFICATION

FEATURE	150T
MAXIMUM HEIGHT - WORKING	14.65m 48ft
MAXIMUM HEIGHT - PLATFORM	12.65m 42ft
MAXIMUM HEIGHT - STOWED	2.0m 6ft 7in
MAXIMUM OUTREACH	7.5m 24ft 7in
MAXIMUM WIDTH - TOWING	1.6m 5ft 3in
JACK SPREAD (FULL PENETRATION)	3.90m Long x 3.84m Wide 12ft 10in Long x 12ft 7in Wide
MAXIMUM LENGTH - STOWED	5.55m 18ft 3in
MAXIMUM CAPACITY - (EUROPEAN) (USA)	225kg (496lb) 500lb
TURRET ROTATION	400°
PLATFORM SIZE - LENGTH X WIDTH	0.7m x 1.4m 27.5in x 55in
CONTROLS	Full proportional hydraulic
HYDRAULIC PRESSURE	210 Bar
TYRES	Bi-Energy 195 R14C 8PR 4.5 bar (65 psi)
GROUND CLEARANCE	215mm 8.5in
GROSS VEHICLE WEIGHT (MAXIMUM)	1775kg – 1800kg (Dependent upon options) 3913lb – 3978lb
MAXIMUM GROUND PRESSURE	0.038kn/cm2 45PSI
POWER SOURCE	E (Electric) - 4 x 6v 245 AH Batteries P(G) (Petrol/Gasoline) - Honda GX160 Engine D (Diesel) models - Yanmar L40

1.5 IDENTIFICATION (UK PLATE)

			
NIFTYLIFT LTD. RINGLE DRIVE, STONEBRIDGE MILTON KEYNES MK13 0ER ENGLAND TEL 01908 223456 : FAX 01908 312733 e-mail : info@niftylift.com			
SERIAL No			
TYPE			
YEAR OF MANUFACTURE			
WEIGHT			kg
RATED LOAD	PERSONS	+	kg
MAXIMUM SAFE WORKING LOAD			kg
MAXIMUM PULL			N
MAXIMUM WIND SPEED			m/s
MAX. ALLOWABLE INCLINATION			Deg.
MAXIMUM HYDRAULIC PRESSURE			bar
MAXIMUM VOLTAGE			V
AMPS			A
ELEC. CCT D	ISSUE		
HYD. CCT D	ISSUE		
			P10805

This manufacturer's plate is attached to the Base on each machine at the time of manufacture on every Niftylift. Please ensure all sections have been stamped and are legible.

1.6 EC DECLARATION OF CONFORMITY (Typical)



EC DECLARATION OF CONFORMITY

MANUFACTURER AND PERSON RESPONSIBLE FOR DOCUMENTATION: **NIFTYLIFT LTD
MALCOLM NORTH**

ADDRESS: **CHALKDELL DRIVE,
SHENLEY WOOD,
MILTON KEYNES,
MK5 6GF
ENGLAND.**

MACHINE TYPE: **MOBILE ELEVATING WORK PLATFORM**

MODEL TYPE:

SERIAL NUMBER:

NOTIFIED BODY: **TUV NORD CERT GmbH**

NOTIFIED BODY NUMBER: **0044**

ADDRESS: **POSTFACH 10 32 61
D-45141 ESSEN
GERMANY**

CERTIFICATE NUMBER:

APPLICABLE STANDARDS: **EN 280:2013
DIN EN 60204-1, 2006/42/EC**

We hereby declare that the above mentioned machine conforms with the requirements of the Machinery Directive, 2006/42/EC and EMC Directive 2004/108/EC

SIGNED: 

DATE:

NAME: **Malcolm North**

POSITION: **Engineering Manager**

NOTE:

THIS DECLARATION CONFORMS WITH THE REQUIREMENTS OF ANNEX II-1.A OF THE COUNCIL DIRECTIVE 2006/42/EC. ANY MODIFICATIONS TO THE ABOVE MENTIONED MACHINE WILL INVALIDATE THIS DECLARATION, AND THE MACHINE'S APPROVAL.

2 Safety

2.1 MANDATORY PRECAUTIONS

When operating your Niftylift, your safety is of utmost concern. In order to fully appreciate all aspects of the machine's operation it should be ensured that each operator has **READ** and fully **UNDERSTOOD** the relevant manual covering machine use, maintenance and servicing. If any doubts exist concerning any points covered in your manual, contact your local dealer or Niftylift Ltd.

Before using any Niftylift, thoroughly inspect the machine for damage or deformation to all major components. Likewise, check the control systems for hydraulic leaks, damaged hoses, cable faults or loose covers to electrical components. At no time should damaged or faulty equipment be used - Correct all defects before putting the platform to work. If in doubt, contact your local dealer or Niftylift Ltd (see front cover for address).



THE MANUFACTURER HAS NO DIRECT CONTROL OVER THE MACHINE APPLICATION AND USE. THEREFORE CONFORMANCE WITH GOOD SAFETY PRACTICES IS THE RESPONSIBILITY OF THE USER AND HIS OPERATING PERSONNEL. FAILURE TO UNDERSTAND AND FOLLOW ALL SAFETY RULES COULD RESULT IN SERIOUS INJURY OR DEATH.

- 2.1.1 Only trained persons will be permitted to operate the Niftylift.
- 2.1.2 Always operate the Niftylift in full accordance with the manufacturer's Operating & Safety Instructions for that model.
- 2.1.3 Before use each day and at the beginning of each shift the Niftylift shall be given a visual inspection and functional test including, but not limited to, operating and emergency controls, safety devices, personal protective clothing, including fall protection, air, hydraulic and fuel system leaks, cables and wiring harness, loose or missing parts, tyres and wheels, placards, warnings, control markings and Operating and Safety Manuals, guards and guard rail systems and all other items specified by the manufacturer.
- 2.1.4 Any problems or malfunctions that affect operational safety must be repaired prior to use of the platform, with specific regard to any safety components refer to the Parts Manual for part numbers and details. If in doubt, contact Niftylift Ltd (Details on page 3). **Ensure wheels are chocked before carrying out any maintenance that involves handbrake release as described in Section 4.7.2 – Towing.**
- 2.1.5 Always ensure that all warning labels, instructions, placards, control markings and Safety Manuals are intact and clearly legible. If replacements are required contact your local dealer or Niftylift. Always observe and obey safety and operating instructions on such labels.
- 2.1.6 Do not alter, modify or disable in any way the controls, safety devices, interlocks or any other part of the machine.
- 2.1.7 Before the Niftylift is used and during use the user shall check the area in which it is to be used for possible hazards such as, but not limited to, uneven ground drop-offs, holes, bumps, obstructions, debris, floor and overhead obstructions, high voltage conductors, wind and weather, unauthorised persons and any other possibly hazardous conditions.
- 2.1.8 Never exceed the maximum platform capacity, as indicated on the decals and machine serial plate.

Operating & Safety Instructions

2.1.9 Never position any part of the Niftylift inside the **Minimum approach distances (MAD)** to above-ground electrical conductors as listed in the table below. (Reference ISO 18893:2014).

Voltage range (kV)	MAD (m)
<0.7	1
≥0.7 to 7	1.2
>7 to 50	3
>50 to 220	4
>220 to 500	5
>500 to 750	10
>750 to 1000	13
>1000 to 1250	16



THIS MACHINE IS NOT INSULATED.

If in doubt, contact the local appropriate governing authority.

2.1.10 On entering the platform ensure that the sliding midrail is fully down in its correct “closed” position.

2.1.11 Use of an approved safety belt and lanyard, hardhat and appropriate safety clothing is strongly recommended for operator safety. Fasten harness to designated harness securing points within the platform and do not remove until leaving the platform with the cage within 400mm of the ground.



Always remain standing within the platform. Do not attempt to increase your height or reach by standing and/or climbing on the platform guardrails or any other object. **KEEP YOUR FEET ON THE PLATFORM FLOOR.** Do not sit, stand or climb on the guardrail, mid rail or boom linkage. Use of planks, ladders or any other devices on the Niftylift for achieving additional height or reach is prohibited.

2.1.12 To obtain the correct platform position above the ground when initially setting up the machine, use the base functions for booms and telescope to position the platform for safe entry to the platform.



THE PLATFORM FLOOR MUST BE WITHIN 400MM OF THE GROUND WHEN ENTERING OR EXITING. DO NOT CLIMB IN OR OUT OF THE PLATFORM WITH THE BOOMS IN THE TRANSPORT POSITION.

2.1.13 Do not use the platform to lift overhanging or bulky items that may exceed the maximum capacity or carry objects that may increase the wind loading on the platform. (e.g. Notice boards etc.)

2.1.14 The Niftylift shall not be operated from a position on trucks, trailers, railway cars, floating vessels, scaffolds or similar equipment unless Niftylift Ltd in Great Britain approves the application in writing.

2.1.15 Always check below and around the platform before lowering or slewing to ensure that the area is clear of personnel and obstructions. Care should be taken when slewing out into areas where there may be passing traffic. Use barriers to control traffic flow or prevent access to the machine.

- 2.1.16** Stunt driving or horseplay, on or around the Niftylift, shall not be permitted.
- 2.1.17** When other moving equipment and vehicles are present, special precautions shall be taken to comply with local ordinances or safety standards established for the work place. Warnings such as, but not limited to, flags, roped off areas, flashing lights and barricades shall be used.
- 2.1.18** It shall be the responsibility of the user to determine the hazard classification of any particular atmosphere or location. Aerial platforms operated in hazardous locations shall be approved and of the type required. (For the USA refer to ANSI/NFPA 505)
- 2.1.19** The operator shall immediately report to his supervisor any potentially hazardous location(s) (environment) which become evident during operation.
- 2.1.20** If an operator encounters any suspected malfunction of the Niftylift or any hazard or potentially unsafe condition relating to capacity, intended use or safe operation he shall cease operation of the Niftylift and request further information as to safe operation from his management, or owner, dealer or manufacturer before further operation of the Niftylift.
- 2.1.21** The operator shall immediately report to his superior any problems or malfunctions of the Niftylift, which becomes evident during operation. Any problems or malfunctions that affect the safety of operation shall be repaired prior to continued use.
- 2.1.22** The boom and platform of the Niftylift shall not be used to jack the wheels off the ground.
- 2.1.23** The Niftylift shall not be used as a crane.
- 2.1.24** The Niftylift shall not be positioned against another object to steady the platform.
- 2.1.25** Care should be taken to prevent rope, electric cords and hoses from becoming entangled in the aerial platform.
- 2.1.26** Batteries shall be recharged in a well-ventilated area free of flame, sparks or other hazards (e.g. do not smoke near the machine) that may cause explosion. Highly explosive hydrogen gas is produced during the charging process.
- 2.1.27** When checking electrolyte levels great care should be taken to protect eyes, skin and clothing. Battery acid is highly corrosive and protective glasses and clothing is recommended.
- 2.1.28** When the machine is not in use always stow the booms correctly. **NEVER LEAVE THE KEYS IN THE MACHINE**, if it is to be left for any period of time. Use wheel chocks if leaving on an incline.
- 2.1.29** If the platform or elevating assembly becomes caught, snagged or otherwise prevented from normal motion by adjacent structure or other obstacles, such that control reversal does not free the platform, all personnel shall be removed from the platform safely before attempts are made to free the platform using ground controls.
- 2.1.30** The engine must be shut down while fuel tanks are being filled. Fuelling must be done in a well-ventilated area free of flame, sparks or any other hazard that may cause fire or explosion. **PETROL (GASOLINE), LIQUID PROPANE AND DIESEL FUELS ARE FLAMMABLE.**



NEVER START THE NIFTYLIFT IF YOU SMELL PETROL (GASOLINE), LIQUID PROPANE OR DIESEL FUEL. THESE FUELS ARE HIGHLY FLAMMABLE.


Operating & Safety Instructions

- 2.1.31** The operator must ensure that engine powered machines are used in a well-ventilated area to minimise the risk of carbon monoxide poisoning.
- 2.1.32** The operator shall implement means provided to protect against use by unauthorised persons.
- 2.1.33** Never remove anything that may affect the stability of the machine such as, but not limited to, batteries, covers, engines, tyres or ballast.
- 2.1.34** Ensure that the machine is stowed in the transport position before towing: Booms central with centring post engaged, telescope fully retracted booms down, and outriggers fully stowed (Cylinders closed).
- 2.1.35** The operator must ensure that the controls are not obstructed (e.g. by tools or equipment) and **clear access to the Emergency Stop** is available at all times.
- 2.1.36** All persons in the cage must take suitable precautions to prevent items falling or being ejected from the cage. E.g. Tethering tools to the machine or operator if practical and an assessment of any resulting risks is acceptable.

2.1.37



Hydraulic oil escaping under pressure can penetrate the skin and cause serious injury. Do not allow hydraulic oil to squirt or spray. Seek immediate medical attention in the event of hydraulic oil penetrating the skin. Wear chemical-resistant protective gloves and suitable eye protection when handling hydraulic oil.

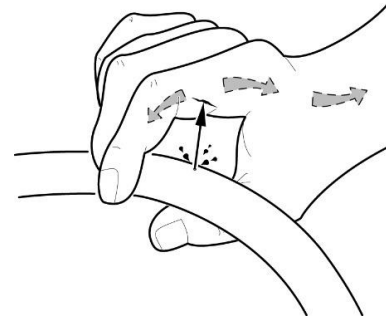

IF THE MACHINE IS TOWED OUT OF THE TRANSPORT POSITION, THEN THE ROAD LIGHTS MAY BE OBSCURED AND THE BALANCE OF THE MACHINE DURING TRANSPORT WILL BE INCORRECT.

2.2 ENVIRONMENTAL LIMITATIONS

All Niftylift Trailer Mounts are limited to operation as previously described and any slopes must be adjusted by using the outriggers. Unless specifically configured otherwise, the machine will have short time rating for operation in extreme temperatures, i.e. reduced battery cycle times for low temperatures such as freezers, food storage etc. and cooling limitations for high temperatures as oil temperature must remain between -23° and 93° Celsius.

Extended operation in dusty environments is not recommended and frequent cleaning will be necessary. All dust, dirt, salt encrustation, excess oil or grease should be removed. Deposits of paint or bitumen, particularly on legends or labels should also be removed.

All standard Niftylift machines are rated for a wind speed of 12.5 m/s, which equates to 45 km/h / 28 mph or force 6 on the Beaufort scale. No attempt should be made to operate a Niftylift in wind strengths above this limit and if the operator has any doubts over the wind speed he / she should cease operation immediately until it can be established that the wind speed has fallen to a safe level.



DO NOT USE THE NIFTYLIFT IN ELECTRICAL STORMS.

2.3 NOISE AND VIBRATION

The airborne noise emission on the 150T range of machines does not exceed 109dB(A), measured within a hemisphere of 16m, under equivalent continuous A-weighted sound pressure test conditions. This was based on a Diesel powered machine, working under load. All other models will exhibit significantly lower emissions than this figure, dependant on power option.

In normal operation the Vibration level to which the operator is subjected will not exceed a weighted root mean square acceleration value of 2.5 m/s².

2.4 TEST REPORT

All Niftylift machine models are subjected to a comprehensive 'type test' which duplicates all combinations of safe working load (SWL), overload, windage, inertia and pull force to assess the various safe stability criteria. Self propelled machines are also subjected to kerb and braking tests at the SWL to satisfy additional 'worse case' stability requirements.

Each individual machine is then subjected to static overload tests on flat level ground with 150% of the SWL, exceeding the requirements of EN280 for power operated MEWPs. Self propelled machines are also tested at the maximum working angle **plus** 0.5° with a test load of 125% of the SWL. Finally, on all machines, a functional test is performed with 110% of SWL.

All safety devices are checked for correct operation, operating speeds are checked against benchmark figures and the dynamic functions ensure that all acceleration and deceleration forces are within acceptable limits. All noted defects are rectified and recorded before the machine is permitted to enter into service.

3 Preparation and Inspection

3.1 UNPACKING

Since the manufacturer has no direct control over the shipping or carriage of any Niftylift it is the responsibility of the dealer and/or owner and/or leaser to ensure the Niftylift has not been damaged in transit and a Pre-operational Report has been carried out by a qualified engineer before the aerial platform is put into service.

- 1) Remove all ropes, straps and or chains used to secure the aerial platform during transit.
- 2) Ensure any ramp, loading dock or forklift used is capable of supporting or lifting the aerial platform.

*****Carry out the Pre-operational Report before placing machine in service.**

3.2 PREPARATION FOR USE



Whilst every effort has been made at the Niftylift factory to ensure your machine arrives in a safe and operable condition it is necessary to carry out a systematic inspection prior to putting the aerial platform into service.
THIS IS NOT A REQUEST IT IS MANDATORY.

To assist the user in this task you will find enclosed an Inspection Check List (see section 6.3), which must be filled out upon delivery/receipt of the machine.

Before the user carries out the Inspection Check List he must have read and fully understood all the contents of the Operating, Safety and Maintenance Manual.



WARNING - DO NOT OPERATE A POTENTIALLY DEFECTIVE OR MALFUNCTIONING MACHINE. CORRECT AND REPAIR ANY DEFECTS BEFORE OPERATING YOUR NIFTYLIFT.

3.3 PRE-OPERATIONAL SAFETY CHECK SCHEDULES

Before use at the beginning of the work shift, the aerial platform shall be given a visual inspection and functional tests including, but not limited to the following. It is recommended that these be performed at regular intervals as indicated on each checklist.

3.3.1 DAILY SAFETY CHECKS

- 1) Check that all labels (decals) are in place and legible.
- 2) Visually inspect the machine for damaged or loose components.
- 3) Check that batteries are charged (if applicable) i.e. Charger has a solid green light and a pulsing red light.
- 4) Check the fuel level (if applicable).
- 5) Check that canopies/covers and guards are in place and secure.
- 6) Check that the boom rest switch is operable.
- 7) Check that control levers are secure and operate freely.
- 8) Check that operating buttons and emergency stop buttons function properly.
- 9) Check the operation of the emergency hand pump.
- 10) Visually inspect all hydraulic hoses and fittings for damage or leaks.
- 11) Check operation of the outrigger alarm.
- 12) Check that outrigger footpads are secure.
- 13) Check that the platform pivot pins and their swing bolts are secure.
- 14) Check the operation of the cage weigh system (If fitted). Refer to Section 4.5 for further information.

3.3.2 WEEKLY SAFETY CHECKS

- 1) Inspect tyres and wheels for damage and wear.
- 2) Check tyres for correct pressure. 65psi (4.5 bar)
- 3) Check mudguards for security and damage.
- 4) Check battery fluid levels and specific gravity (after charging) and general condition.
- 5) Check hydraulic oil level, ISO Grade 22 (Europe), Grade 32 (Rest of World).
- 6) Inspect the engine air filter and clean or replace if necessary.
- 7) Check that the tow hitch ball lock, breakaway cable/chain and jockey wheel are secure.
- 8) Check operation and security of outrigger micro switches in conjunction with the alarm system.
- 9) Inspect hose track for damage or missing parts.

Operating & Safety Instructions

3.3.3 MONTHLY SAFETY CHECKS

- 1) Check the engine oil level (if applicable).
- 2) Check the wheel nuts (torque 107ft lbs / 145Nm).
- 3) Check outriggers for condition, security and operation.
- 4) Check that the slew worm is secure and correctly in mesh. Clean and re-grease.
- 5) Inspect brakes for operation and wear.
- 6) Inspect the engine fuel tank for damage or leaks.
- 7) Check telescopic boom wear pads and nylon studs (if applicable).
- 8) Grease the tow hitch assembly.
- 9) Check and adjust if necessary the Nylatron studs around the telescope boom.
- 10) Every **Six** months perform a **thorough examination** in accordance with the 'Lifting Operation and Lifting Equipment Regulations' (LOLER) 1998, Regulation (9)(3)(a).

3.3.4 ANNUAL SAFETY CHECKS

- 1) Check that all pivot pins and their swing bolts are secure.
- 2) Inspect for any cracks or badly rusted areas on booms and chassis.
- 3) Change the hydraulic oil and the oil filters.
- 4) Inspect the suspension on each axle unit.
- 5) Check that slew ringbolts are secured (torque 206ft lbs. / 279Nm).

3.4 PLACARD, DECALS & INSTALLATION (UK)

ITEM	DESCRIPTION	NUMBER	QTY	
1	Daily Safety Checks	P14908	1	
2	If Tilt Alarm Sounds	P18842	2	
3	General Crash	P14782	6	
4	Cage Gate Warning	P18335	1	
6	Coupling Instructions	P14896	1	
7	Harness Points	P32302	2	
8	Are you trained?	P22055	1	
9	Tyre Pressure 65psi	P14876	2	
10	No Step	P14785	8	
11	Manual Handpump	P17854	1	
12	Wheel Nut Torque, 145nm	P34741	2	
13	General Warning - Icons	P29379	2	
14	Head Protection	P14921	1	
15	Serial Plate	P32187	1	
16	General Notice	P18863	1	
17	Swl 225 Kg	P17328	1	
18	Nifty 150T - Grey	P17787	2	
19	Niftylift.Com	P14390	1	
20	Hydraulic oil - ISO22	P14415	1	
21	Point Load – 12.2 kN	P18625	4	
22	Outriggers Warning	P14841	4	
23	Outriggers Control	P29378	1	
24	Hydraulic Controls – 4 Levers (Base)	P14928	1	
25	Base Controls	P32377	1	
26	Hazard Tape		A/R	
28	Handbrake - ON/OFF (USA)	P22245	1	
29	Rotating machinery (USA)	P15010	2	
31	Read Manual	P14892	1	
32	Overload Warning	P18848	2	
33	E-Stop Warning	P14864	2	
34	Cage Entry 400 mm	P18192	2	
35	Booms Stowed Warning	P18198	2	
36	Oil Fill Warning	P18206	1	
37	Oil Fill Level	P18252	1	
38	50mm Tow Hitch (Australia Only)	P17970	1	
39	11m Key Switch (Australia Only)	P32376	1	
40	Axle plate	P24210	1	
41	11m Height Restriction (Australia/NZ only)	P19046	1	
42	Cage Controls	E	P32368	1
		P/PE	P32370	1
		D/DE	P32367	1
43	Hydraulic Controls – 5 Levers (Cage)	P14927	1	
44	Cage levelling	P10853	1	
45	Decouple before use	P29590	1	
46	General Warning - Text	P29380	1	

nifty™ TM Series


Operating & Safety Instructions

47	E-Stop background		P24893	1
48	Annual inspection (USA only)		P33474	1
49	Footswitch		P14884	1
52	Disconnect mains		P32248	1
53	Battery drain		P19850	1
54	Battery - Isolator		P18600	1
55	Power to Cage socket	110V	P26426	1
		230V	P26862	1
57	Power to Cage (Tool)	110V	P33012	1
58		230V	P33011	1
59	Traction Drive - Release		P18975	1
60	Traction drive – On slope		P18976	1
61	Traction Drive – Engage		P18890	1
62	Hand Crush (Traction Drive)		P14782	2
63	Battery Charger Socket	110V	P26425	1
64		230V	P26863	1
65	Mains Power socket		P25891	1
66	Battery - Charger		P21951	1
67	Noise Warning 109dB		P34924	1
68	Petrol Off		P19055	1
69	Diesel		P14414	1

nifty™ Series

Operating & Safety Instructions

150T/42T SERIES

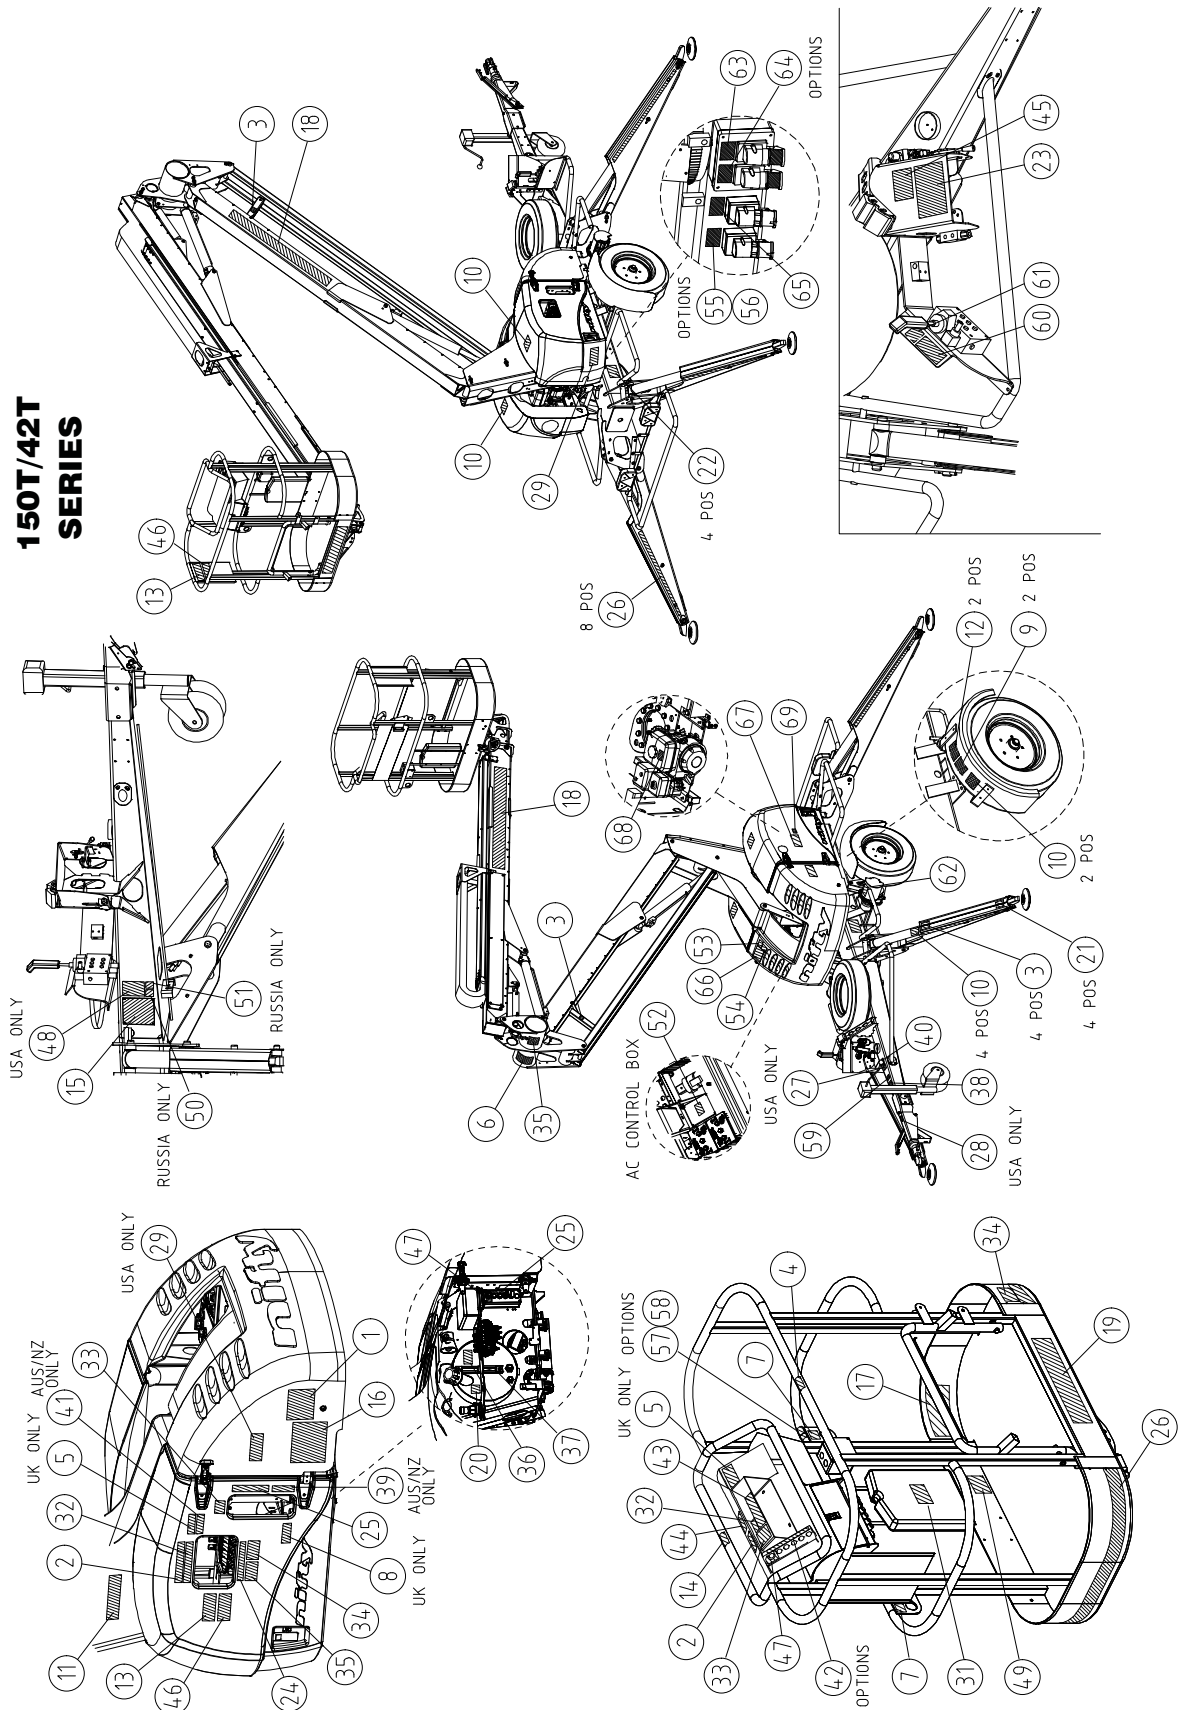

3.5 TORQUE REQUIREMENTS

BOLT QUALITY/SIZE	Tightening torque in lbs ft (Nm)					
	Plated			Unplated		
Grade	8.8	10.9	12.9	8.8	10.9	12.9
M 6	5 (7)	8 (10)	9 (12)	6 (8)	8 (11)	10 (13)
M 8	13 (17)	18 (25)	22 (29)	14 (19)	20 (27)	23 (32)
M 10	25 (34)	36 (49)	43 (58)	27 (37)	40 (54)	46 (63)
M 12	43 (58)	63 (85)	73 (99)	47 (63)	69 (93)	80 (108)
M 14	68 (93)	100 (135)	117 (158)	74 (101)	109 (148)	127 (172)
M 16	106 (143)	154 (209)	180 (245)	115 (156)	168 (228)	197 (267)
M 20	212 (288)	301 (408)	352 (477)	224 (304)	328 (445)	384 (521)
M24	362 (491)	515 (698)	602 (806)	383 (519)	561 (760)	656 (889)
WHEEL NUTS	107ft lbs (145 Nm)					
SLEW RING BOLTS	206ft lbs (279 Nm)					

This torque chart is based on the following assumptions:

- 1) Bolts to ISO 898-1 "Mechanical properties of fasteners made of carbon steel and alloy steel"
- 2) For "unplated" bolts, all grades:
 - Hex head bolts
 - Black oxide steel bolt with a rolled & oiled thread, no finish on steel nut
 - Prevailing torque includes Nylock (minimum prevailing torque figure assumed)
 - Medium Clearance holes to ISO 273
 - Bolt tightening condition = Yield factor of 75%
- 3) For "plated" bolts, all grades:
 - Hex head bolts
 - Zinc plated oiled (rolled or cut) steel external thread with no finish on steel internal thread
 - Prevailing torque includes Nylock (minimum prevailing torque figure assumed)
 - Medium Clearance holes to ISO 273
 - Bolt tightening condition = Yield factor of 75%

Figures quoted in **Nm** have been calculated in Nm and then rounded to the nearest whole number. Figures quoted in **lb-ft** have been calculated in Nm, converted using a factor of 0.737561 and then rounded.

4 Operation

4.1 CONTROL CIRCUIT COMPONENTS

4.1.1 CONTROL BOARD: - Situated under the control canopy, the control board comprises a PCB (printed circuit board) design that incorporates all of the relays to control the machine operation. The control board is common between models with the same power source, and will contain, where appropriate, discrete fuses for the circuits concerned.

4.1.2 KLAXON: - Also mounted under the control canopy is a klaxon, which is interlocked into the outrigger control circuit. It is this device that sounds continuously if a jack goes light in operation, with the booms raised, warning the operator of this condition. It will also sound if the Ground Control Key switch is turned to Platform position before the outriggers are deployed.

4.1.3 SWITCHES: - There are two switches:

Boom-Switch - Mounted on the side of the superstructure near the boom rest and operated by contact with the section 1,

Slew Centring Switch - Mounted on the underside of the superstructure and operated by dropping into a gap in the slew spacer plate on the base.

These switches control the changeover function between outriggers and platform. The outrigger control function is not available unless all of these switches are engaged, ensuring that the machine must be stowed to operate the hydraulic outriggers. It is also similarly linked into the platform control circuit, such that if the switches are not engaged, (i.e. machine is in operation) then the outrigger sensors are active and would warn the operator of an unsafe condition, should one of them loose contact with the ground. These control functions are of primary importance to safety of the machine and operator, under no circumstances should they be isolated or by-passed.

4.1.4 BATTERY ISOLATOR: - A red battery isolator handle is located beneath the battery canopy which allows the machine control and power circuits to be isolated from the batteries themselves. Under normal operation, the machine Key switch should be used to isolate the machine with the Battery Isolator only being required to disconnect the batteries for maintenance or in the event of a short circuit. The battery charging circuit is connected directly to the battery side, so charging is un-affected by use of this switch.

4.1.5 POWER SOURCE SELECTION: - On multiple power option machines, the machine is fitted with an 'instinctive' circuit for power source selection. Pressing the green button will automatically select battery operation. The engine can be started using the two position START/STOP selector in the platform and the machine will 'default' to engine operation via a flow switch in the hydraulic circuit. Stopping the engine by selecting STOP on the two-position selector in the platform and pressing the green button will return the machine to battery mode. The engine is started from the base by turning the switch on the engine, under the engine canopy.

4.1.6 PETROL ENGINE: - Generally a Honda GX160 engine, described in the maintenance section of the Workshop Manual, driving a single body pump with direct mounted pump dump valve.

4.1.7 11 METRE RESTRICTION (Australia/New Zealand ONLY): - An additional key switch installed on the ground controls. It permits the machine owner/hirer to limit the working platform height of the machine to a **maximum** of 11 metres for untrained operators.

Operating & Safety Instructions

4.2 SETTING UP PROCEDURES



FAILURE TO DEPLOY THE OUTRIGGERS CORRECTLY COULD RESULT IN DEATH OR SERIOUS INJURY.

ALL MODELS

- 1) Read and fully comply with all safety precautions and operating instructions in the Operating and Safety manual and the warning decals on the machine.
- 2) Position Niftylift on firm ground, bearing in mind range of boom movement so that any overhead obstructions or possible hazards such as, but not limited to, power cables, telephone lines, drains, manhole covers, etc. can be safely avoided.
- 3) **APPLY HANDBRAKE:** Chock wheels and cordon off the area using appropriate cones, barriers and flags. Ensure platform is **fully disconnected** from towing vehicle (Coupling, electrics and breakaway cable – Refer to Section 4.7.2).
- 4) Levelling the machine using the hydraulic outriggers can accommodate a slope of up to 12 degrees, if necessary using suitable load bearing pads to support the downhill outriggers. Do not elevate the platform unless the base can be corrected to a level state.
- 5) If the load bearing capacity of the ground is in any doubt the machine must NOT be used.
- 6) Check all red emergency stops are not engaged (i.e. fully out by twisting them in the direction of the arrows).
- 7) Ensure that the key switch at the ground control station is turned to the “Ground” position (i.e. clockwise).
- 8) At the outrigger control station press down and hold the power lever on the right hand side. This activates the power and diverts hydraulic flow to the legs for setting up. Then select the appropriate control lever to begin setup. Note: No power will be available if the booms are not stowed onto the boom rest.
- 9) Using the four outrigger control levers, lower each outrigger onto a firm, level surface and level the machine base ensuring each outrigger foot is taking equal weight with the wheels clear of the ground. Note: Deploy the front two outriggers first to minimise the risk of damaging the jockey wheel.
- 10) Check that the base is level using the spirit level adjacent to outrigger control station as a guide.
- 11) The booms can now be operated from the ground control station by pressing and holding the green power button. Note: If the klaxon alarm sounds check that each outrigger is lowered and each footpad is loaded.
- 12) Always lower booms fully before adjusting, raising, retracting or moving the outriggers in any way.
- 13) Never alter, modify or block any of the safety circuits on the Niftylift.



THIS MACHINE IS NOT ELECTRICALLY INSULATED. DO NOT WORK WITHIN 10FT (3M) OF OVERHEAD CABLES EXCEEDING 415 VOLTS

4.3 GROUND CONTROL OPERATION



ALWAYS ALLOW THE ENGINE TO WARM UP BEFORE OPERATION.

4.3.1 GROUND CONTROL INSTRUCTIONS

ALL MODELS

- 1) Check below, above and around the platform for any obstructions or hazards before operating any function.
- 2) Ensure all red emergency stops are out.
- 3) Turn the key switch at the ground control station to the “Ground” position (i.e. clockwise).
- 4) Battery/Electric models go to step 11).

PETROL ENGINE OR BI-ENERGY MODELS

- 5) Turn the main engine ignition switch, located on the side of the canopy through “ON” to the “ST” (start) position and the engine will fire.
- 6) Go to step 11). Note – Unless the petrol engine is running, the 150T will automatically default to the primary power source (usually battery)

PETROL (GASOLINE) ENGINE OR PETROL (GASOLINE)/ELECTRIC MODELS

- 7) For a cold engine start go to step 8) or for a warm engine start go to step 9).
- 8) **COLD ENGINE:** - turn the engine fuel tap “ON” and engage the choke lever. Turn the main engine ignition through “ON” to “ST” (Start) and the engine will fire. Return the choke lever to its normal running position after the engine is started.
- 9) **WARM ENGINE:** - turn the engine fuel tap on and turn the main engine ignition through “ON” to “ST” (start) position and the engine will fire.
- 10) Go to step 11). Note – Unless the petrol engine is running, the 150T will automatically default to the primary power source (usually battery)

ALL MODELS

- 11) Push and hold green power button.
- 12) Select the boom function required and operate hand levers in full accordance with manufacturer’s Operating and Safety manual.
- 13) When not in use return machine to stowed position, fully raise and stow all outriggers, turn the key to the “OFF” position (i.e. anti-clockwise), remove key and chock wheels.


EMERGENCY PROCEDURES

- 1) Push in red emergency stop to shut down all functions.
- 2) Use emergency hand pump (located under control canopy) to provide motive power and manoeuvre the machine as normal using the hand levers (Platform or Base).

Operating & Safety Instructions

BOOM FUNCTIONS

- 1) Push and hold green power button.

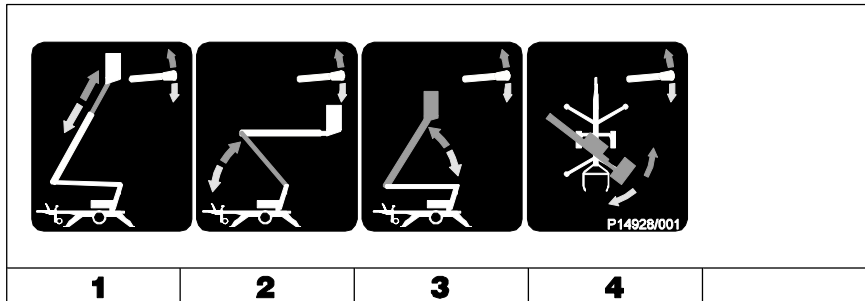

- 2) Select lever 1, 2, 3 or 4 for desired boom function.

1 Operates Telescope	UP for out	DOWN for in.
2 Operates Lower Boom	UP for up	DOWN for down
3 Operates Upper Boom	UP for up	DOWN for down
4 Operates Swing	UP for right	DOWN for left



ALWAYS ENSURE THE AERIAL PLATFORM IS ON A FIRM SURFACE AND THE AREA IS FREE OF ANY OVERHEAD OBSTRUCTIONS.

ENGAGING THE RED EMERGENCY STOP BUTTON WILL SHUT DOWN THE ENGINE AND THE ELECTRIC CIRCUIT PREVENTING OPERATION OF ANY FUNCTION.

4.4 PLATFORM CONTROL OPERATION



NEVER START THE NIFTYLIFT IF YOU SMELL PETROL (GASOLINE), LIQUID PROPANE OR DIESEL. THESE FUELS ARE FLAMMABLE.

BEFORE OPERATING THE NIFTYLIFT ENSURE THAT EACH OPERATOR HAS READ AND FULLY UNDERSTOOD THE OPERATING MANUAL. FAILURE TO DO SO MAY RESULT IN DEATH OR SERIOUS INJURY.

*****FOR COLD START PROCEDURES SEE SECTION 4.3.1*****

ALWAYS ALLOW THE ENGINE TO WARM UP BEFORE OPERATING.

4.4.1 PLATFORM CONTROL INSTRUCTIONS

ALL MODELS

- 1) **NEVER** exceed the maximum platform capacity.
- 2) Check below, above and around the platform for any obstruction or hazards before operating any function.
- 3) Ensure all red emergency stops are out.
- 4) Turn key switch at the ground control station to 'Cage' (turn key anti-clockwise). Enter cage and turn Cage control selector to the 'ON' position (clockwise).
- 5) Battery electric models go to step 8).

PETROL ENGINE OR PETROL/ELECTRIC MODELS ONLY

- 6) Ensure that the fuel tap is turned to the "ON" position and that the main engine ignition switch is "ON". Turn the "Engine Start" switch on the platform control box clockwise and the engine will fire.

Note – Unless the petrol engine is running, the 150T will automatically default to the primary power source (usually battery)
- 7) IF THE ENGINE IS TOO COLD TO START FROM THE PLATFORM, TRY STARTING FROM THE GROUND CONTROLS AS DESCRIBED IN STEP 8) OF GROUND CONTROL OPERATION (REFER TO SECTION 4.3.1).


ALL MODELS

- 8) Push and hold green power button.
- 9) Select the boom function required and operate hand levers in full accordance with manufacturers Operating and Safety manual.
- 10) When not in use return machine to stowed position, fully raise and stow all outriggers, turn the key to the "OFF" position (anti-clockwise), remove key and chock wheels.

EMERGENCY PROCEDURES

- 1) Push in red emergency stop to shut down all functions.
- 2) Use emergency hand pump (located under control canopy) to provide motive power and manoeuvre the machine as normal using the hand levers (Platform or Base).


PLATFORM CONTROL STATION

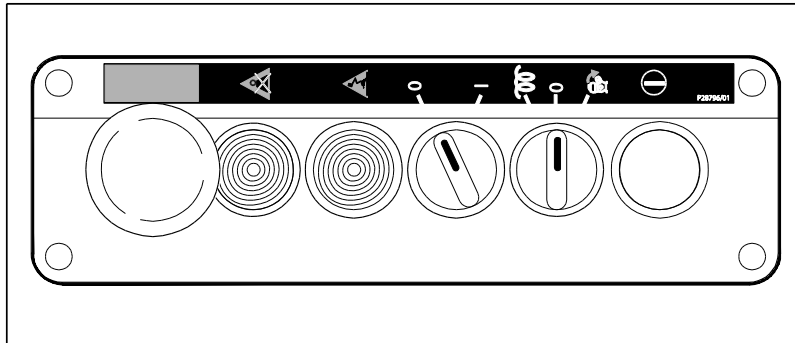

(BI-ENERGY MODEL)

BOOM FUNCTIONS

1) Push and hold green "Power Control" button.

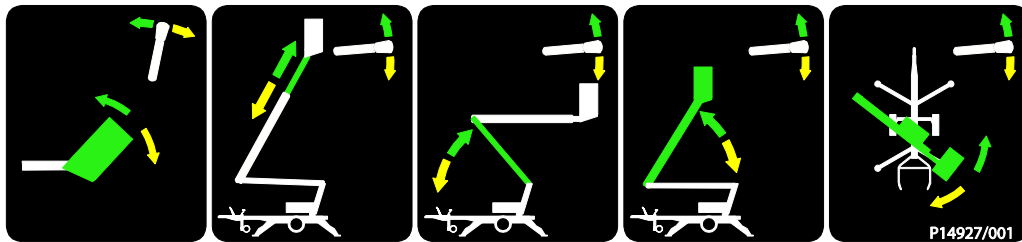

1

2

3

4

5

2) Select lever 1, 2, 3, 4 or 5 for desired function.

1 Operates Platform Levelling	FWD for forward	BACK for back
2 Operates Telescope	UP for out	DOWN for in.
3 Operates Lower Boom	UP for up	DOWN for down
4 Operates Upper Boom	UP for up	DOWN for down
5 Operates Swing	UP for right	DOWN for left

4.5 CAGE WEIGH SYSTEM

4.5.1 LOAD CELL VERSION

The Niftylift 150T is fitted with an electronic load cell. This load cell is a moment-independent design. This means that independent of the load position inside the machine cage, the actual load is measured and if pre-calibrated limit values are exceeded, warnings will be activated. If load exceeds the safe working limit (SWL) of the machine, the machine will be disabled until the load is reduced to below 95% of the safe working limit. The design of the unit meets the requirements of both BS EN280 and ISO 13849 with a safety integrity level of "Category 3 PL d. (Refer to Appendix A)

4.5.2 CALIBRATION, INSPECTION AND MAINTENANCE

Calibration, maintenance and repair of the Niftylift 150T cage load cell requires specialist knowledge and equipment. **For this reason, no part of the Niftylift 150T cage-weigh system can be adjusted, repaired or inspected by the operator.**

All enquiries relating to calibration, inspection or maintenance should be directed to Niftylift or one of their approved dealers. Contact details are listed in Section 1.3.

4.6 BATTERIES AND CHARGING



BATTERIES MUST BE RECHARGED IN A WELL-VENTILATED AREA FREE OF FLAME, SPARKS OR OTHER HAZARDS THAT MAY CAUSE EXPLOSION. HIGHLY EXPLOSIVE HYDROGEN GAS IS PRODUCED DURING THE CHARGING PROCESS.

- 1) Recharge batteries at the end of every working day or shift.
(Note: To recharge batteries fully from flat takes approx. 12 Hours, this consists of 8 hours bulk charging plus 4 hours equalisation).
- 2) Plug charger into suitable power supply, either 240 volts or 110 volts AC (see **Charging Limitations**). (Note: If using 240V, use of a suitably rated Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD) at the point of supply is highly recommended.)
- 3) Take note of the indicators provided:
Amber AC lamp - Batteries are charging.
Amber CHARGE lamp - Batteries are charging and between 80% & 100% capacity.
Green FINISH lamp - the batteries are fully charged.
Red lamp flashing – Fault (see ‘Charging Limitations’).
- 4) The charger will automatically switch off once the batteries are fully charged. It is recommended to reconnect the charger to a suitable power supply when the machine is not in use to maintain good battery condition. Charger will monitor and maintain correct battery charge level.



UNDER NO CIRCUMSTANCES SHOULD A MACHINE BE LEFT FULLY DISCHARGED AS SEVERE BATTERY DAMAGE CAN OCCUR IN A RELATIVELY SHORT TIME.

- 5) The machine boom functions can be used whilst on charge. Do not drive machine to avoid damage to cables etc. To disconnect charger, firstly switch off the power supply. Ensure LED's are off before disconnecting the charger from the power supply.

Notes:

- 1) If the charger is reconnected to the power supply shortly after it has gone through its full charging cycle, the charger will show the Amber AC lamp, immediately followed by the Amber Charge lamp. The charger would then go through its complete cycle again at an accelerated rate, depending on the time difference between connection, reconnection, and level of battery charge.
- 2) Some machines are fitted with a Battery Management System, which permanently monitors the condition of the batteries. When the batteries become discharged to 20% of their capacity the management system will begin to "shut down" the hydraulic power packs. This causes the drive/boom operating system to alternately stop and start, signalling to the operator that re-charging is necessary. However, there is sufficient power remaining to enable the operator to drive slowly to the nearest charging point.

Operating & Safety Instructions

Should the operator ignore the onset of the battery discharge warning the "shut down" of the motors will continue, until the machine is rendered in-operative. **Immediate charging will then be required.**

CHARGING LIMITATIONS

The capacity of the 110V supply must be capable of 3.5kVA (32A current); hence a small hand-tool transformer will **not** operate the battery charger.

Note; charger output will fall if air temperature is below 0°C or above 50°C.

Red LED status	Cause	Solution
One flash	Battery High Voltage	Check battery size and condition. This fault will automatically clear once the condition has been corrected.
Two flashes	Battery Low Voltage	Check battery size and condition. This fault will automatically clear once the condition has been corrected.
Three flashes	Charger Timeout. Caused by battery pack not reaching required voltage. Charger output reduced due to high ambient temperature.	Check connections. Operate charger at a lower ambient temperature. Reset charger (interrupt AC power for 15 seconds)
Four flashes	Check Battery(ies); battery could not be trickle charged up to minimum voltage.	Check for shorted or damaged cells Reset charger (interrupt AC power for 15 seconds)
Five flashes	High temperature. Charger shut down due to high internal temperature.	Ensure sufficient cooling airflow and reset charger (interrupt AC power for 15 seconds)
Six flashes	Charger Internal Fault	Reset charger (interrupt AC power for 15 seconds). Return to service department if fault persists.

Attention should also be given to the use of extension cables as power leads. Excessive cable lengths from the supply point to the battery charger will result in significant voltage drop, leading to a reduction in the chargers efficiency. In addition, inadequate sized cable cores will have a limiting effect on its current carrying capacity, which will again lead to a reduction in the chargers efficiency. Both of these can result in over-heating of the cable increasing the risk of fire, short circuits or damage to the components themselves.

Either charger requires a minimum battery voltage of 4.5 volts per battery (overall for two batteries 9 volts, for 4 batteries 19 volts for 8 batteries 38 volts). If the voltage is below these values then the charger will not function correctly (Transformer Charger will not detect batteries to begin charge). If the batteries have fallen to such a poor state they will have to be removed from the machine and charged individually with an independent charger until the optimum voltage has been reached. This is best performed at very low currents to 'recover' the batteries if sulphation has already started i.e. a 'trickle' charger. This can take several hours, possibly days. Careful monitoring of the rise of battery voltage will indicate when recovery has been achieved.

Operating & Safety Instructions

TOPPING UP

During the course of normal operation, the batteries should be inspected at least once a fortnight to check the level of electrolyte. During the end of charge, gassing takes place, which will cause a slight reduction in the volume of acid in the battery. This can be topped up with de-ionised water as required. During this inspection, it is useful to note any imbalance in the fluid levels. One indication of a faulty cell would be an increase in the loss of battery acid, which would then require more frequent topping up on that cell, or cells. Faulty cells can liberate excess hydrogen, even during normal operation, with the resulting risk of explosion if ignited. **Any faulty batteries should be replaced as soon as possible with an equivalent sized and rated unit.**

Note: BATTERIES CONTAIN ACID, therefore: - Protective safety glasses and gloves (Appropriate PPE) MUST be worn whilst performing these checks.

4.7 TRANSPORTING, TOWING, CRANEAGE, STORAGE AND SETTING TO WORK

4.7.1 TRANSPORTING

If a work platform is to be moved over a longer distance, whether the machine is trailer mounted, vehicle mounted, self propelled or tracked, the following procedure should be read before restraints are attached to the machine. Cross loading is most frequently the cause of problems, as the method of loading is no longer under the control of our own personnel. The recommendations made herein should be passed on to subsequent carriers, such that the entire journey is carried out without incident.

- Always ensure the truck or trailer you are loading or towing the Niftylift with can carry it legally.
- If loading by crane the use of shackles and an adequately rated spreader beam, with four leg slings around indicated slinging points on base, is **MANDATORY**.
- When loading or un-loading from the side of the vehicle, the use of the forklift pockets to retain one of the forks is recommended. (If fitted). Spread the forks to their widest capacity, with due regard to the components fitted to the machine. **Never forklift or crane an entire machine under the booms**, always lift beneath the spine or under the ends of the axle mountings in the case of a self-propelled unit. Ensure forklift is adequately rated for the load to be carried. If the machine is fitted with Traction Drive, this needs to be engaged (as described in steps 1 to 5 of Section 4.7.2) with the drive barrels positioned in contact with the tyres. Access to the fork pockets is now possible by using an appropriate forklift that will span the tyre and fit through the fork pocket. Note: A large forklift will not be suitable as the wider forks require the full width of the fork pocket. Be careful not to damage the brake cables that pass underneath the base of the machine.
- Once positioned on the transport carrier, ratchet straps should be used to secure the machine. Pass the strap over the bosses located in the bottom of all four outrigger housings on the base and secure to the transport carrier. The machine should be positioned to allow easy access around the machine in transit, and to ensure that 'creepage' during transport does not permit the machine to come into contact with other goods being shipped, or the container itself. Some movement of the machine structure might occur during transit, which could lead to fretting or other damage.
- If the machine is equipped with a transit device such as a boom clamp etc, this should be securely applied.
- Strap booms carefully to constrain them from sideways movement. When using straps or chains, adequate packing should be applied to stop any damage to the structure and paintwork. Due regard of the movement of the straps or chains must be taken into account.
- Where a machine has designated points for strapping, lifting or forking, these can be used for tie-down duty. When they are absent, the major structure of the platform can be used, giving due consideration to the design and function of the area chosen. Where possible, use the spine of the machine or axle mounts over which to apply the holding down forces. Using a single plate, such as an outrigger or stabiliser support plate might be unsuitable. If the component was clearly not designed to accommodate a side load, one should not be applied.
- Under no circumstances should straps or chains be applied over booms or through the cage support structure or the cage itself. The relative strength of the carrying structure is not conducive to the massive forces capable of being applied through ratchet chains or slings.

Operating & Safety Instructions

Severe damage to the steelwork can be caused, as well as deformation to sensitive mechanisms such as cage weigh assemblies, which would render them useless. Such catastrophic damage to say, an electronic load cell would require the component to be replaced before the machine would function.

4.7.2 TOWING



ENSURE THE BOOMS ARE FULLY STOWED BEFORE TRANSPORTING. THE MAXIMUM RECOMMENDED TOWING SPEED OF A 150T (TM42T) NIFTYLIFT IS 60 MPH (96 KM/H) (EUROPE), 100 KM/H (AUSTRALIA) WITH A VEHICLE THAT COMPLIES WITH ALL ROAD TRAFFIC REGULATIONS. IT IS THE DRIVER'S RESPONSIBILITY TO OBEY ANY SPEED RESTRICTIONS THAT FURTHER REDUCE THE ALLOWABLE TOWING SPEED. SPEEDING MAY RESULT IN DEATH OR SERIOUS INJURY.

It is recommended that the maximum towing speed of 60 mph (96 km/h) (Europe), 100 km/h (Australia) be adhered to for the greatest safety. The speed must be further reduced when local traffic restrictions require it. In other than perfect conditions it is sensible to further reduce your speed in order to ensure full control over your vehicle and trailer. The importance of the suitability of your towing vehicle must be stressed. The vehicle manufacturer's details concerning each model will give you recommended Gross Vehicle Weights (GVW) or Gross Train Weights (GTW) neither of which should be exceeded.

Wheel Nut Check

If being towed for the first time after initial build, please ensure the wheel nuts are secured to the correct torque (Refer to Section 3.5) after **two days or 100 miles**. Also, if wheels have been removed, recheck torque after travelling a **maximum** distance of **100 miles**.

Brake Adjustment

Trailer brakes are adjusted for gradual over-run braking on initial build. After being towed for the **first week or 150 miles**, the brake shoes will 'bed-in' and **require adjustment** for this wear. Adjust the brake shoe clearance and check the hand brake lever travel in accordance with the manufacturer's instructions. Please contact Niftylift Service Department for the correct adjustment procedure for your specific brake/tow hitch combination.

POSITION TOWING VEHICLE AND TRAILER ON LEVEL GROUND BEFORE ATTEMPTING TO COUPLE/DE-COUPLE.

Coupling Instructions

- 1) Depress the trigger on the lever mechanism and lift the handle upwards and forward.
- 2) Place the unlocked coupling head onto the towing ball and apply slight downward pressure. The head will automatically lock onto the ball.
- 3) Ensure that the trigger has returned to its free position before attempting to tow, and that the coupling head is securely on the towing ball.
- 4) Connect the breakaway cable/chain to the towing vehicle hitch - not to the tow ball itself.
- 5) Connect the lighting plug to the vehicle and check the light functions.
- 6) Raise the jockey wheel to its stowed position and secure for transit.

De-coupling Instructions

- 1) Apply trailer handbrake and chock wheels.
- 2) Lower the jockey wheel to the ground. Disconnect the breakaway cable/chain and lighting plug.
- 3) Operate the handle by depressing the trigger and manually lift the coupling head clear of the towing ball or screw down the telescopic jockey wheel to achieve the same effect.

Handbrake Operation

- 1) To operate the trailer parking brakes pull the handbrake lever upwards and backwards. The spring-loaded mechanism will engage and stay in the operated position until re-set.
- 2) To disengage the parking brakes, firmly grasp the handbrake lever and pull upwards. Depress the ratchet release button in the end of the handbrake lever and return the lever to the horizontal position. Care should be taken when operating the handbrake lever due to the forces involved in engaging the ratchet mechanism.

4.7.3 CRANEAGE

- 1) Observe all of the limitations relating to straps and chains stated above under 'Transporting'. (Section 4.7.1)
- 2) When utilising the designated lifting points never apply a 'snatch' load, i.e. lift slowly to take up the load before raising. Similarly, do not drop machine when positioning after lifting.
- 3) If the machine is to be lifted by crane, use the designated lifting points and observe the recommendations regarding spreader beams. Individual drawings are available for each machine type, on request. (See list below.)

D80904	90
D81193	120M
D80541	120T/H
D81273	150T
D80906	170H
D80939	210

4.7.4 STORAGE

If being stored for any length of time without use, then the machine should be thoroughly inspected for the following: -

- 1) Grease all bearings /slides, worm drives, etc.
- 2) Check batteries for electrolyte levels, state of charge, damage, dirt, etc. Never leave in a state of discharge for any length of time. If no use of the platform is intended, an occasional "top-up" charge of the batteries will serve to equalise their charge level.
- 3) Leave battery disconnect switch in OFF position to prevent discharge of batteries through leakage.
- 4) If machine is to be left on an incline, chock wheels to prevent creep.
- 5) If machine is to be left outdoors or in a hostile environment, cover with suitable weatherproof media to prevent deterioration.

Operating & Safety Instructions

4.7.5 SETTING TO WORK

Before use each day and at the beginning of each shift the machine shall be given a visual and functional test including, but not limited to, the following

- 1) Check all lubrication points for adequate application of grease, oil etc.
- 2) Inspect all threads for ease of operation.
- 3) Check level and quantity of oil. Remove any contaminants - water, etc.
- 4) Check batteries for electrolyte and state of charge.
- 5) Check electrics for damage and insulation.
- 6) Using base controls, cycle machine over complete envelope in accordance with the Operating Instructions. Cure any defects.
- 7) Ensure that all safety devices and controls operate in accordance with the instructions.
- 8) If necessary, perform a load test to establish the machine stability before putting the machine to work.
- 9) On completion of an extended period of road transport, the machine might need additional inspection to identify any transit degradation, which could render the machine unsafe. Perform a P.D.I. inspection on the unit before it enters service. Record any faults found and rectify them immediately.
- 10) If left un-attended for an extended period, it is likely that the hydraulic cage levelling will become un-pressurised. Normal operation is then lost, with a noticeable delay in the forwards or backwards motion as the booms move. To restore normal function, the cage needs to be fully levelled forwards and backwards, using the cage-levelling lever whilst not standing in the cage (i.e. with the operator standing adjacent to the cage side whilst simultaneously operating the lever and green button to move the cage). Take care not to become trapped between the moving cage and a fixed object, and ensure those around you are clear of the moving cage. When the system has been charged in both directions, the cage levelling function should be restored. If the system operates but is 'jerky' in either direction, this indicates air in the system. Repeat the procedure as described above until the movements are smooth and un-interrupted. If in doubt, contact our Service Department for further advice.

Niftylift Limited is not liable for any third party damage caused during transport. Careful attention to correct procedures will prevent many of the small snags that can happen in transit. Re-work is both expensive and time consuming. A defective machine arriving at the place of work is a poor advertisement for our product, the company's reputation and those of our dealers and clients. The responsibility for safe and damage-free transport rests with the haulier or his representatives.

4.8 TRACTION DRIVE POSITIONING SYSTEM

4.8.1 DESCRIPTION

A Traction Drive Positioning System is an option for most trailer-mounted machines. The system is used for positioning the trailer in the work location and to assist coupling the trailer to the towing vehicle. The system is for use on flat level ground and must not be used to ascend or descend slopes in excess of 10% (5.7°) as this may result in serious injury. If the machine is to be moved up or down a slope in excess of 10%, a suitable towing vehicle must be used instead.

The Traction Drive Positioning System is driven hydraulically and powered by the machine's power system. The drive speeds and gradeability are therefore dependent upon the power available from the machine. The engagement of the Traction Drive Positioning System is also hydraulic and is controlled using a single hand lever to bring the drive barrels into contact with the road tyres. Manoeuvrability is controlled from a single joystick which is used to move the machine forwards or backwards and steer left or right.

4.8.2 ENGAGING DRIVE

- 1) Before engaging the Traction Drive Positioning System, ensure that the machine is de-coupled from the towing vehicle, the jockey wheel is deployed and fixed securely, and the parking handbrake is fully engaged.
- 2) Check that all Emergency Stops are released (In the 'Out' position), and the Base Key Switch is in the 'Ground' position. This activates the electrical circuit for the Drive Joystick and Outtrigger Controls.
- 3) The Drive Joystick has a single pushbutton located on the handle. Pushing and holding this button allows the power unit to produce hydraulic flow, which is directed to the drive motors. **Do not** operate the Outtrigger Selector Lever, as this will divert the hydraulic flow to the Outtrigger Controls and deactivate the Traction Drive Positioning System.
- 4) To engage the Traction Drive Positioning System, first check that there are no persons in the immediate area of the drive barrels to prevent a crush injury. Press the Drive Joystick Button and move the separate Control Lever upwards or towards the road tyres (Depending on the machine type). This will activate the engagement cylinder and rotate the traction barrels towards the road tyres. This function is pressure protected, and the lever should be held to allow the cradles to 'push' into the pneumatic tyres for the best grip when positioning the machine. This pressure is set in the factory to 80Bar, and should not need adjustment.
- 5) Once the drive barrels are in position, release the Control Lever and Drive Joystick Button to lock the engagement cylinder in this position. Only then should the parking handbrake be released. The machine will be held securely on the Traction Drive Positioning System.
- 6) To move the machine, push and hold the Drive Joystick Button and move the Drive Joystick in the required direction of travel. The machine moves in relation to the directional movement of the Drive Joystick. To stop the machine, return the Drive Joystick to the centralised 'Off' position, or release the Drive Joystick Button to stop the hydraulic flow. Similarly, the Emergency Stops can be used to halt the machine drive at any time.

Operating & Safety Instructions

4.8.3 DISENGAGING DRIVE

- 1) Ensure that the machine is positioned on flat, level ground and the parking handbrake is fully engaged or wheels chocked securely before the Traction Drive Positioning System is disengaged. Unless the machine has been manoeuvred and coupled to a towing vehicle (as described in the appropriate section of this handbook).
- 2) To disengage the drive barrels, press the button on the Drive Joystick and move the separate Control Lever downwards or away from the road tyres (Depending on the machine type). At this point the engagement cylinder will activate and rotate the drive barrels away from the road tyres. Release the Control Lever once the drive barrels have rotated fully to achieve maximum clearance from the road tyres. This will lock the Traction Drive Positioning System in the retracted position, ready for towing.

4.8.4 SAFETY WARNINGS

- 1) **Do not** tow the machine with the Traction Drive Positioning System engaged onto the road tyres. This would result in serious damage to the machine.
- 2) **Do not** use the Traction Drive Positioning System as a brake. Use the parking handbrake and wheel chocks if necessary.
- 3) **Do not** disengage the Traction Drive Positioning System unless either:
The parking handbrake is fully engaged
The road wheels are chocked securely
Or, the machine is connected directly and securely to a suitable towing vehicle
- 4) **Do not** engage or disengage the Traction Drive Positioning System when the machine is moving.
- 5) **Do not** ride on the machine whilst using the Traction Drive Positioning System or stand inside the machine structure, as serious injury may occur.
- 6) **Do not** drive the machine over long distances using the Traction Drive Positioning System; use a suitable towing vehicle instead. This is especially important when using battery power, as this will reduce the energy available in the batteries for elevating the machine.
- 7) **Always** position the machine on flat, level ground before disengaging the Traction Drive Positioning System.
- 8) **Always** be aware of the environment surrounding the machine. Ensure that appropriate measures are taken to prevent injury to the operator or passers-by. These may include using cones to segregate the vicinity around the machine in pedestrian areas, or using another person to guide the Traction Drive Positioning System operator in areas of limited visibility.
- 9) **Always** stow the stabilisers and use a suitable towing vehicle when moving the machine between work locations.
- 10) **Always** manoeuvre the machine correctly on slopes. If moving the machine up a slope (Ensure slope is less than 10% (5.7°) as stated previously), approach the slope with the tow hitch end of the machine downhill and the rear of the machine uphill, ensuring that the jockey wheel is loaded throughout. This will prevent the machine tipping if a sudden stop is made. To maximise the load on the jockey wheel, lower the tow hitch as far as possible by winding the jockey wheel Handle. Ensure that the jockey wheel can rotate freely around both its axle and its post.

5 Emergency Controls

5.1 GENERAL

CHECKING THE OPERATION OF THE EMERGENCY CONTROLS EVERY DAY AND/OR BEFORE EACH SHIFT IS AN ESSENTIAL PART OF THE OPERATOR'S DUTIES



The operator and all ground personnel must be thoroughly familiar with the location and operation of the EMERGENCY CONTROLS.

5.2 IN THE EVENT OF AN INCAPACITATED OPERATOR

Turn the key switch selector at ground control station to 'Ground' (clockwise). Then lower on the ground controls as detailed under section 4.3 Ground Control Operation.

5.3 IN THE EVENT OF MACHINE FAILURE

Operate manual hand pump (located under control cover) and lower platform to the ground using either platform or base controls. If initial movement of the machine allows the master alarm to reset, normal controls will be available. This is then the fastest method of lowering the platform to the ground.

Note If the machine is fitted with a cage overload system, and the cage comes into contact with a fixed object whilst operating at height, this would be detected as an overload condition. All power to the machine controls would be lost, requiring the machine to be recovered using the **Manual Hand Pump**. It is sufficient for the cage to be manoeuvred away from the collision point to release the cage weigh system, thereby restoring normal machine operation. The cage could then be brought down using the controls as described previously.

5.4 INCIDENT NOTIFICATION

It is a mandatory requirement that any accident or incident involving a Niftylift, regardless of whether any party received injury or property was damaged, is reported by telephone directly to Niftylift. Failure to do so may render any warranty on the machine void.

6 Responsibilities

6.1 CHANGES IN OWNERSHIP

When a change of ownership of a Niftylift occurs, it shall be the responsibility of the seller to notify Niftylift direct of the unit, model and serial number and the name and address of the new owner within 60 days. This important step is required so that all future Technical Bulletins are able to reach the registered owner of each machine without delay. Please note warranties are not transferable.

6.2 MANUAL OF RESPONSIBILITIES

You are required by ANSI/SIA 92.5 2006, to read and understand your responsibilities before you use or operate this aerial platform.

Please read the enclosed document, as failure to do so could result in death or serious injury.

Wherever any contradiction may appear, the Manual of Responsibilities shall take precedence over all other documents.

6.3 INSPECTION/SERVICE/PRE-HIRE CHECK LIST

MACHINE SERIAL NO _____

TOWING	PASS	FAIL	N/A
Operation of tow coupling			
Operation of handbrake			
Operation of jockey wheel			
OUTRIGGERS			
Micro-switches secure			
Operation of each micro-switch and klaxon			
Operation of jack control valve and buttons			
Operation of each hydraulic jack			
Operation of boom rest micro-switch			
AXLES, WHEELS AND BRAKES			
Axles slide freely, or are secure			
Wheels are secure, tyre condition acceptable			
Wheel bearings OK			
Mudguards are secure			
Locating pins operate freely and oiled (if applicable)			
Lock bolts are tight			
Wheels spin freely when handbrake is released			
Brakes come on equally when handbrake is applied			
Brake linkages and cables secure			
Brake shoe wear not excessive			
Breakaway cable fitted and operable			
Lighting board fitted, lights function			
Tyre pressure correct			
Wheel nut torque correct			
BASE			
Operation of base control valve and buttons			
Operation of all booms over full range			
Cylinders are silent			
Platform is level over full range			
Booms, levelling rods not damaged or distorted			
Booms, levelling rods, cylinders not fouling			
Hoses not tight, kinked or fouled			
Operation of emergency hand pump			
Traction Drive Positioning System securely attached to axle			

nifty™ TM Series

Operating & Safety Instructions

SLEWING	PASS	FAIL	N/A
Slew assembly and motor are secure			
Worm/wheel mesh correct, no excessive wear			
No end float of worm in housing			
Slew wheel bolts secured			
Slew guards secure			
PLATFORM			
Operation of control valve and buttons			
Operation of all booms over full range			
Cylinders are silent			
Platform levelling over full range			
Slewing smooth over full range			
INTERNAL (POWER PACK)			
Power pack and all components secure			
All cables and terminals secure			
All hose connections secure			
Hoses not kinked or fouled			
Charger/control box secure			
Battery secure			
Electrolyte level and specific gravity			
Charger operation			
Hydraulic oil level			
FINISH			
Swing bolts			
Correct decals, all visible			
Canopy/bonnets			
Grease nipples (Tow coupling, Slew ring)			
LEAK CHECK			
Cylinders (Lift, Outriggers, Telescope, Levelling)			
Control valves			
Check valves			
Power pack/pump			
Slew motor			
Hose connections			

Comments, remedial work required etc;

INSPECTED BY: _____

DATE: / /

Appendix A

Safety Related Parts of the Control System (SRP/CS)

The Niftylift control system has been designed and validated according to the required standards. The table below lists the safety related parts of the control system and the level to which they have been approved.

The performance level (PL) of each SRP/CS is specified by BS EN 280:2013 section 5.11 Table 4.

Safety Related Part of the Control System (SRP/CS)	Approval (Standard, Performance Level)
A1 Monitoring of stabilisers - Setting up	ISO 13849-1:2008 PL c
A2 Monitoring of stabilisers - Booms	ISO 13849-1:2008 PL d
A3 Load sensing system	ISO 13849-1:2008 PL d
A4 Platform levelling	ISO 13849-1:2008 PL c
A5 Interlocking of control positions	ISO 13849-1:2008 PL c
A6 Prevent movements of load holding cylinders in case of pipe failure	ISO 13849-1:2008 PL c

A1 MONITORING OF STABILISERS – SETTING UP

The inclination interlock or Tilt System is PL c in accordance with ISO 13849-1:2008 as required by BS EN 280:2013

1. The limits of the safety-related parts to the category selected and any fault exclusions;

The stabiliser monitoring is only active when the booms are lifted up off the boom rest such that the boom switch is actuated.

The boom switch relies on the electrical contacts opening allowing the stabiliser monitoring circuit to become ‘active’.

The opening of the contacts is forced by the use of the spring contained within the jack foot switch assembly. **Proper maintenance and daily safety checks to be observed.**

The boom switch cannot be overridden to bypass the tilt system other than by demounting the switch with the use of tools. **Reasonably foreseeable misuse.**

If the boom switch is removed or if it is not maintained in accordance with the appropriate documentation the stabiliser monitoring may not function in compliance with the requirements as a PL c category 1 device.

2. The limits of the SRP/CS and any fault exclusion, for which, when essential for maintaining the selected category or categories and safety performance, appropriate information (e.g. for modification, maintenance and repair) shall be given to ensure the continued justification of the fault exclusion(s);

Do not alter, modify or disable in any way the controls, safety devices, interlocks or any other part of the machine.

Operating & Safety Instructions

Maintenance must only be carried out by appropriately trained and competent persons.

3. The effects of deviations from the specified performance on the safety function(s);

If the monitoring of the stabilisers does not function as intended it is possible that the Niftylift may encounter slopes for which it is not rated.

If the Niftylift encounters slopes beyond the rating as specified on the serial plate the product may become unstable.

If the product becomes unstable, damage to the Niftylift, other equipment and properties, injury or loss of life of the operator and surrounding persons may be a risk.

4. Clear descriptions of the interfaces to the SRP/CS and protective devices;

The monitoring of the stabilisers is primarily the series circuit through the outrigger feet on each stabiliser. The initial 'proving' circuit that permits the booms to rise has to pass through the safety relay module which provides a two channel output for safety. The first channel will allow the operation of the selected power option on the trailer. The second channel has overall control of the Master dump for the hydraulic circuit. Simultaneous operation of both channels is required for the machine to function. Loss of either channel will cause the circuit to halt operation.

5. Response time

The monitoring of the stabilisers is active at all times providing the security of the outrigger feet being in contact with the ground whilst the booms are elevated. In the event of encountering a loss of foot contact the system will sound an alarm until the booms have been lowered on to the boom rest and the foot contact has been corrected.

6. Operating limits (including environmental conditions);

All components within the stabiliser monitoring are rated to the environmental conditions acceptable for the machine; refer to Section 2.2.

7. Indications and alarms;

Jack feet contact

The action of the stabiliser monitoring circuit will cause the klaxon to sound and will be indicated by the red warning light on the base and cage location, if the booms are raised and the loss of any jack foot contact is detected.

8. Muting and suspension of safety functions;

While the stabiliser monitoring is always active with the booms raised, the changeover of the boom switch permits continued operation of the booms until they are returned to the 'stowed' position. The loss of jack foot contact will be indicated via warning lights regardless of the boom position.

9. Control modes;

The stabiliser monitoring circuit has no user controllable modes of operation.

10. Maintenance; Maintenance check lists;

Normal maintenance

- Visual check of jack foot switches, boom switch and connection wires.
- Check of power supply to verify it is correct.

- Check of the equipment correct operation, by simulating a fault condition and correspondent resetting. See “Means for easy and safe trouble shooting”
- Check correct operation of the boom switch.

Should special maintenance be required please observe the following precautions.

- 1) Cut off power supply before every check or replacement.
- 2) Do not weld on machine structure before removing power supply (positive and negative) and detaching boxes from vehicle frame or possible connections towards vehicle frame.
- 3) Provide suitable mechanical protections for connection wires, paying particular attention for transducers.
- 4) Do not place board, transducers or cabling close to sources of heat, electromagnetic interferences or power transmissions.
- 5) Do not touch directly boards, transducers and boxes with flushing or degreaser fluids under pressure.
- 6) Do not pierce the board box.
- 7) Seal the box and/or the panel which contains the electronic board, to reveal any unauthorized access or tampering.

11. Ease of accessibility and replacing of internal parts;

Replacement of parts should only be carried out by appropriately trained and competent persons.

If parts require replacement only replace the complete item such as Boom Switch, Jack Safety Switch, PCB or Hydraulic valve block.

Do not attempt to open the safety module or replace components soldered to any PCB.

Do not attempt maintenance of hydraulic components i.e. replace seals or internal component.

Only Niftylift original and supplied parts shall be used.

12. Means for easy and safe trouble shooting;

To check the operation of the stabiliser monitoring system

1. Power on the Niftylift and select the base control location.
2. Using the jack duty selector, engage the selected power option and deploy the jacks into contact with the floor, levelling the spine of the machine.
3. In order to verify the stabiliser monitoring safety circuit it is necessary for someone to operate and hold the base green button whilst a second operative performs the jack foot switch test. Manually depress each jack foot switch plunger in turn by reaching inside the outrigger housing and finding the safety switch. Once depressed, the hydraulic power on the machine will be lost until the plunger is released. As each switch is manually depressed, operating a boom lever will not cause the boom to move, the alarm will however not sound, as the booms are still stowed.
4. Return to the ground control location and using the base green button raise the booms to clear the boom rest and operate the cam switch. (Situated between booms 2 and 3 adjacent to the knuckle)
5. In order to verify only the operation of the alarm circuit whilst the booms are elevated, it is possible to again manually depress each jack foot switch plunger in turn by reaching inside the outrigger housing and finding the safety switch. Once depressed, the alarm should sound until the plunger is released. Operation of the booms is left unaffected as the ‘boom switch bypass’

Operating & Safety Instructions

function will allow the operator to return the booms to the stowed position, even whilst the alarm is still sounding. This is to prevent the operator being stranded in the air whilst a jack foot remains in the unstable position.

6. Power off the Niftylift.

13. *Information explaining the applications for use relevant to the category to which reference is made;*

Not applicable

14. *Checking test intervals where relevant.*

Check the operation of the stabiliser monitoring system at the beginning of every duty cycle.

A2 MONITORING OF STABILISERS – BOOMS

The monitoring of the stabilisers is PL d in accordance with ISO 13849-1:2008 as required by BS EN 280:2013

1. *The limits of the safety-related parts to the category selected and any fault exclusions;*

The stabiliser monitoring is performed from the boom switch which allows movement of the stabilisers only when the booms are stowed.

The boom switch relies on the electrical contacts closing allowing the jack circuit to become 'active'.

Proper maintenance and daily safety checks to be observed.

The boom switch cannot be overridden to bypass the monitoring system other than by demounting the switch with the use of tools. **Reasonably foreseeable misuse.**

If the boom switch is removed or if it is not maintained in accordance with the appropriate documentation the stabiliser monitoring may not function in compliance with the requirements as a PL d category 3 device.

2. *The limits of the SRP/CS and any fault exclusion, for which, when essential for maintaining the selected category or categories and safety performance, appropriate information (e.g. for modification, maintenance and repair) shall be given to ensure the continued justification of the fault exclusion(s);*

Do not alter, modify or disable in any way the controls, safety devices, interlocks or any other part of the machine.

Maintenance must only be carried out by appropriately trained and competent persons.

3. *The effects of deviations from the specified performance on the safety function(s);*

If the monitoring of the stabilisers does not function as intended it is possible that the Niftylift may encounter slopes for which it is not rated.

If the Niftylift encounters slopes beyond the rating as specified on the serial plate the product may become unstable.

4. Clear descriptions of the interfaces to the SRP/CS and protective devices;

The monitoring of the booms is primarily the circuit through the booms elevated switch, operated via a cam on Boom 2/3. The initial 'proving' circuit that permits the stabilisers to move has to pass through the safety relay module which provides a two channel output for safety. The first channel will allow the operation of the selected power option on the trailer. The second channel has overall control of the Master dump for the hydraulic circuit. Simultaneous operation of both channels is required for the machine to function. Loss of either channel will cause the circuit to halt operation.

5. Response time

The monitoring of the booms is active when the jack control lever is depressed at the control station, ensuring the booms are stowed before permitting use of the jacks.

6. Operating limits (including environmental conditions);

All components within the booms monitoring are rated to the environmental conditions acceptable for the machine; refer to Section 2.2.

7. Indications and alarms;

Boom stowed.

The action of the booms monitoring circuit will interface with the jack control circuit. There is however no alarm or indication function associated with the booms being in 'normal' operation.

8. Muting and suspension of safety functions;

While the stabiliser monitoring is always active with the booms raised, the changeover of the boom switch permits continued operation of the booms until they are returned to the 'stowed' position. The loss of jack foot contact will be indicated via warning lights regardless of the boom position.

9. Control modes;

The boom monitoring circuit has no user controllable modes of operation.

10. Maintenance; Maintenance check lists;

Normal maintenance

- Visual check of jack foot switches, boom switch and connection wires.
- Check of power supply to verify it is correct.
- Check of the equipment correct operation, by simulating a fault condition and correspondent resetting. See "Means for easy and safe trouble shooting"
- Check correct operation of the boom switch.

Should special maintenance be required please observe the following precautions.

- 1) Cut off power supply before every check or replacement.
- 2) Do not weld on machine structure before removing power supply (positive and negative) and detaching boxes from vehicle frame or possible connections towards vehicle frame.
- 3) Provide suitable mechanical protections for connection wires, paying particular attention for transducers.
- 4) Do not place board, transducers or cabling close to sources of heat, electromagnetic interferences or power transmissions.

Operating & Safety Instructions

- 5) Do not touch directly boards, transducers and boxes with flushing or degreaser fluids under pressure.
- 6) Do not pierce the board box.
- 7) Seal the box and/or the panel which contains the electronic board, to reveal any unauthorized access or tampering.

11. Ease of accessibility and replacing of internal parts;

Replacement of parts should only be carried out by appropriately trained and competent persons.

If parts require replacement only replace the complete item such as Boom Switch, Jack Safety Switch, PCB or Hydraulic valve block.

Do not attempt to open the safety module or replace components soldered to any PCB.

Do not attempt maintenance of hydraulic components i.e. replace seals or internal component.

Only Niftylift original and supplied parts shall be used.

12. Means for easy and safe trouble shooting;

To check the operation of the elevated drive speed system

- 1) Power on the Niftylift and select the base control location.
- 2) Using the jack duty selector, engage the selected power option and deploy the jacks into contact with the floor, levelling the spine of the machine.
- 3) At the ground control location and using the base green button raise the booms to clear the boom rest and operate the cam switch. (Situated between booms 2 and 3 adjacent to the knuckle)
- 4) Return to the jack control station and deploy the stabiliser operating lever. Both the electrical and hydraulic system will be rendered inoperative and jack controls will not function.
- 5) Power off the Niftylift.

13. Information explaining the applications for use relevant to the category to which reference is made;

Not applicable.

14. Checking test intervals where relevant.

Check the operation of the stabiliser monitoring system at the beginning of every duty cycle.

A3 LOAD SENSING SYSTEM

The Load sensing system is PL d in accordance with ISO 13849-1:2008 as required by BS EN 280:2013

1. The limits of the safety-related parts to the category selected and any fault exclusions;

The load sensing system is activated whenever a green button or footswitch input is given to the PCB. The sensing system is a two-channel device which takes the input from a single load cell bridge on the cage load cell. The actual cage load is determined, and in the case of an overload, the alarm will sound and the output signal is lost.

The loss of the output signal is converted into two separate signals, one of which is used to isolate Channel 1 output (EN) and the other to isolate the Channel 2 output. (GBO). **Proper maintenance and daily safety checks to be observed.**

On initial set-up the machine must be zero loaded to allow the 'Tare' function to register the no-load condition. Following that, a calibrated test load is put into the cage to set the upper limit. Proper adherence to the zero set point and the correct test load must be taken to ensure the load sensing system is working correctly. It is possible to apply the overload to the machine in the rest position, and then only to detect this on the next application of the command signal. If the machine has been in the elevated position the consequences of this would be more significant than if the machine were stowed.

Reasonably foreseeable misuse

2. The limits of the SRP/CS and any fault exclusion, for which, when essential for maintaining the selected category or categories and safety performance, appropriate information (e.g. for modification, maintenance and repair) shall be given to ensure the continued justification of the fault exclusion(s);

Do not alter, modify or disable in any way the controls, safety devices, interlocks or any other part of the machine.

Maintenance must only be carried out by appropriately trained and competent persons, who are conversant with all modes of operation, speeds and characteristics of this model.

3. The effects of deviations from the specified performance on the safety function(s);

If the load sensing system does not function as intended it is possible that the Niftylift may encounter overloads for which it is not rated.

If the Niftylift encounters loads beyond the rating as specified on the serial plate the product may become unstable.

If the product becomes unstable, damage to the Niftylift, other equipment and properties, injury or loss of life of the operator and surrounding persons may be a risk.

4. Clear descriptions of the interfaces to the SRP/CS and protective devices;

The load moment control system comprises of a primary device the "load sensor" and control PCB, and protective devices, for example solenoid operated Master dump valves or contactors.

If the load sensing system cuts out, an alarm will sound and a clear indication of visual overload will be given at each operating position. The system will not re-set until the overload has been removed, by recommendation of reducing the overload in a safe manner.

Operating & Safety Instructions

5. Response time;

The Load sensing system is active all the time the green button or footswitch is depressed, the application of an overload will be detected within 4 seconds to cater for transient loads and acceleration forces. The alarm and visual indication will continue to sound as long as the machine is overloaded and the command signal is being applied. Removal of the overload by reduction of the applied load will take the cage weight below the threshold for activation as there is 95% hysteresis in the system. Once restored the load system will function as before and no re-calibration will be necessary.

6. Operating limits (including environmental conditions);

All components within the load sensing system are rated to the environmental conditions acceptable for the machine; see **Section 2.2**.

7. Indications and alarms;

The action of the cage overload detection will cause the klaxon to sound and will be indicated by the red warning light on the base and cage location, only as long as the green button or footswitch is continued to be depressed.

8. Muting and suspension of safety functions;

In the case of the overload being detected the alarm can be silenced by releasing the green button or footswitch. Suspension of the function will continue until the overload has been safely removed.

9. Control modes;

The load sensing system has no user controllable modes of operation, other than by use of the calibration tool.

10. Maintenance; Maintenance check lists;

Normal maintenance

- Visual check of transducers, board (box) and connection wires.
- Check of power supply to verify it is correct.
- Check of the equipment correct operation, by simulating an overload condition and correspondent re-setting. See "Means for easy and safe trouble shooting"

The load sensor will not normally require special maintenance

Should special maintenance be require please observe the following precautions.

- 1) Cut off power supply before every check or replacement.
- 2) Do not weld on machine structure before removing power supply (positive and negative) and detaching boxes from vehicle frame or possible connections towards vehicle frame.
- 3) Provide suitable mechanical protections for connection wires, paying particular attention for transducers.
- 4) Do not place board, transducers or cabling close to sources of heat, electromagnetic interferences or power transmissions.
- 5) Do not touch directly boards, transducers and boxes with flushing or degreaser fluids under pressure.
- 6) Do not pierce the board box.
- 7) Seal the box and/or the panel which contains the electronic board, to reveal any unauthorized access or tampering.

11. Ease of accessibility and replacing of internal parts;

Replacement of parts should only be carried out by appropriately trained and competent persons.

If parts require replacement only replace the complete item such as Load Sensor, PCB or Hydraulic valve block.

Do not attempt to open the load sensing PCB or replace components soldered to any PCB.

Do not attempt maintenance of hydraulic components i.e. replace seals or internal components.

Only Niftylift original and supplied parts shall be used.

12. Means for easy and safe trouble shooting;

To check the operation of the load sensor system

1. Power on the Niftylift and select the base control location.
2. Allow the power circuits to cycle and ensure the machine is ready for the command signal.
3. Press the base green button and observe that the machine is ready to function with no load in the cage. (Machine runs, pump flow is available for machine functions.)
4. Select the Cage control position and mount into the cage.
5. Enable the cage controls and then press the cage green button or foot switch to enable the machine functions. (Machine runs, pump flow is available for machine operation.)
6. Add sufficient load to the cage to exceed the safe working load. Press the green button or foot switch and observe that the cage overload system brings in the alarm and halts all machine movements.
7. Remove the overload to below the threshold for safe working load and observe that the cage load control automatically re-sets and restores all machine functions.
8. Power off the Niftylift.

13. Information explaining the applications for use relevant to the category to which reference is made;

Not applicable

14. Checking test intervals where relevant.

Check the operation of the load sensing system at the beginning of every duty cycle.

A4 PLATFORM LEVELLING

The Platform levelling system is PL c in accordance with ISO 13849-1:2008 as required by BS EN 280:2013

1. The limits of the safety-related parts to the category selected and any fault exclusions;

The Platform levelling system comprises of a load holding device mounted to the slave levelling cylinder.

2. The limits of the SRP/CS and any fault exclusion, for which, when essential for maintaining the selected category or categories and safety performance, appropriate information (e.g. for modification, maintenance and repair) shall be given to ensure the continued justification of the fault exclusion(s);

Do not alter, modify or disable in any way the controls, safety devices, interlocks or any other part of the machine.

In the event of a hose failure ensure a recovery plan is in place that does not require the movement of the luffing booms as the angle of the cage will not be maintained. See effect of deviations from the specified performance below.

Maintenance must only be carried out by appropriately trained and competent persons.

3. The effects of deviations from the specified performance on the safety function(s);

If the levelling system of the product does not function as intended the angle of the cage may not be maintained.

If the angle of cage is not maintained there is an increased risk of ejection of tools and equipment from the cage.

In the event of the operator or other occupants of the cage not using the required safety equipment they may be ejected from the cage and serious injury or death may occur.

There is a load holding device contained within the assembly of the slave levelling cylinder such that if a hose fails the cage position is maintained until the operator can be recovered from the cage.

4. Clear descriptions of the interfaces to the SRP/CS and protective devices;

The levelling system comprises of two hydraulic cylinders and interconnecting hoses.

One is referred to as the Master levelling cylinder

The other is referred to as the Slave levelling cylinder.

In normal operation when the luffing booms are elevated the master levelling cylinder responds to the movement of the booms and causes a transfer of hydraulic fluid to the appropriate side of the slave levelling cylinder.

This transfer of hydraulic fluid maintains the level aspect of the cage.

5. Response time

The Levelling system is a direct acting hydraulic system and as such the response time is near instantaneous.

6. Operating limits (including environmental conditions);

All components within the tilt interlock are rated to the environmental conditions acceptable for the machine; see **Section 2.2**.

7. Indications and alarms;

There are no indicators or alarms to show that the Niftylift levelling system is or is not functioning.

8. Muting and suspension of safety functions;

It is not possible to suspend the operation of the Elevated levelling system

9. Control modes;

The levelling system has two modes of operation

- 7) Normal movements of the luffing booms cause the system to constantly adjust the cage angle to keep it level.
- 8) Manual adjustment to account for drift of the system over time.

10. Maintenance; Maintenance check lists;

Normal maintenance

- Removal of air from the hydraulic system if the product is left unused for long periods of time.

11. Ease of accessibility and replacing of internal parts;

Replacement of parts should only be carried out by appropriately trained and competent persons.

If parts require replacement only replace the whole components such as hoses, hydraulic cylinders or load holding and over centre valve.

Do not attempt maintenance of hydraulic components i.e. replace seals or internal component.

Only Niftylift original and supplied parts shall be used.

12. Means for easy and safe trouble shooting;

Elevate the luffing booms and check that the cage remains level. If the cage does not remain level the system should be serviced by trained persons fully conversant with the system functionality.

13. Information explaining the applications for use relevant to the category to which reference is made;

Not applicable

14. Checking test intervals where relevant.

Check the operation of the elevated drive system at the beginning of every duty cycle.

A5 INTERLOCKING OF CONTROL POSITIONS

The interlocking of the control positions is PL c in accordance with ISO 13849-1:2008 as required by BS EN 280:2013

1. The limits of the safety-related parts to the category selected and any fault exclusions;

The physical interlocks between the multiple control positions are controlled through primarily electrical means such that neither position takes sole command unless selected. The alternate control position is then rendered inoperative by isolation of that control circuit. **Proper maintenance and daily safety checks to be observed.**

Since the physical installation of the electrical contacts is the means by which the control circuit operates it is imperative that the functionality is retained. If the internal wiring is interfered with the control isolation could be lost or altered in a way that promotes a dangerous mode of operation. **Reasonably foreseeable misuse**

2. The limits of the SRP/CS and any fault exclusion, for which, when essential for maintaining the selected category or categories and safety performance, appropriate information (e.g. for modification, maintenance and repair) shall be given to ensure the continued justification of the fault exclusion(s);

Do not alter, modify or disable in any way the controls, safety devices, interlocks or any other part of the machine.

Maintenance must only be carried on by appropriately trained and competent persons, who are conversant with all modes of operation, speeds and characteristics of this model.

3. The effects of deviations from the specified performance on the safety function(s);

If the interlocking of the control positions does not function as intended it is possible that the Niftylift may allow modes of operation that render it potentially dangerous.

If the controls do not remain independent in their operation, damage to the Niftylift, other equipment and properties, injury or loss of life of the operator and surrounding persons may be a risk.

4. Clear descriptions of the interfaces to the SRP/CS and protective devices;

Each control position is capable of being energised by means of a key operated 'mode selector' which electrically isolates the other circuit when one is selected. The reliability of this function depends on the correct device operator in conjunction with the appropriate contact and internal wiring.

5. Response time

Operation of the mode selector key switch is immediate. Control authority is transferred over and no residual power functions remain with the alternate control position, other than gravity descent (if used.)

6. Operating limits (including environmental conditions);

All components within the control interlock system are rated to the environmental conditions acceptable for the machine; see **Section 2.2.**

7. Indications and alarms;

None, other than by key position.

8. Muting and suspension of safety functions;

None.

9. Control modes;

The standard EU control circuit will permit independent operation of either control position, working through a series Emergency Stop control circuit. In some countries (e.g France and Australia) the alternate control interlock permits the cage system to be isolated by the ground control key switch and will ignore the use of the Cage Emergency Stop. This function effectively promotes the Ground control position to have overall authority over the machine, when selected.

10. Maintenance; Maintenance check lists;

Normal maintenance

- Visual check of switch operators, (Key switch) and connection wires.
- Check of power supply to verify it is correct.
- Check of the equipment correct operation, by selection of the alternate control position and then checking that the green button is inert at the non-selected position.

11. Ease of accessibility and replacing of internal parts;

Replacement of parts should only be carried out by appropriately trained and competent persons.

Individual parts of the control devices can be replaced, ensuring like-for-like exchange of parts, security of the wiring and polarity of components if applicable (Diode outputs etc.)

Only Niftylift original and supplied parts shall be used.

12. Means for easy and safe trouble shooting;

To check the operation of the load sensor system.

1. Power on the Niftylift and select the base control location.
2. Allow the power circuits to cycle and ensure the machine is ready for the command signal.
3. Press the base green button and observe that the machine is ready to function with no load in the cage. (Machine runs, pump flow is available for machine functions.)
4. Leave the base key in the ground control position and climb into the cage.
5. Enable the cage controls and then press the cage green button or foot switch to enable the machine functions. Check that no controls are active and that no functions are permitted with the key in the 'ground' control position.
6. Have the base key switch position altered to the Cage position. Check that the control functions are now transferred to the cage, and that all controls are active.
7. Dismount from the cage and check the ground controls are now inoperative. All checks are then complete.
8. Power off the Niftylift.

13. Information explaining the applications for use relevant to the category to which reference is made;

Not applicable

14. Checking test intervals where relevant.

Check the operation of the control position interlock at the beginning of every duty cycle.

A6 PREVENT MOVEMENTS OF LOAD HOLDING CYLINDERS IN CASE OF PIPE FAILURE

The load holding system is PL c in accordance with ISO 13849-1:2008 as required by BS EN 280:2013

1. The limits of the safety-related parts to the category selected and any fault exclusions;

The load holding system comprises of a load holding device mounted to the cylinder.

2. The limits of the SRP/CS and any fault exclusion, for which, when essential for maintaining the selected category or categories and safety performance, appropriate information (e.g. for modification, maintenance and repair) shall be given to ensure the continued justification of the fault exclusion(s);

Do not alter, modify or disable in any way the controls, safety devices, interlocks or any other part of the machine.

In the event of a hose failure ensure a recovery plan is in place that does not require the movement of the affected cylinder. A safe route of recovery might involve the replacement in-situ of the failed hose before further movement of the machine is possible.

Maintenance must only be carried out by appropriately trained and competent persons.

3. The effects of deviations from the specified performance on the safety function(s);

If the load holding system of the product does not function as intended the angle of the security of the booms may not be maintained.

If the angle of the cage is not maintained there is an increased risk of ejection of tools and equipment from the cage.

In the event of the operator or other occupants of the cage not using the required safety equipment they may be ejected from the cage and serious injury or death may occur.

There is a load holding device contained within the assembly of the slave levelling cylinder such that if a hose fails the cage position is maintained until the operator can be recovered from the cage.

4. Clear descriptions of the interfaces to the SRP/CS and protective devices;

The load holding system comprises of a pilot operated over centre valve on each load holding cylinder.

The opening of the load holding valve is dependent on the application of a pilot pressure in the descent line to bring the machine down. Excessive over pressure either by overload or thermal expansion can induce an over centre pilot descent until the excess pressure condition is removed.

5. Response time

The load holding system is a direct acting hydraulic system and as such the response time is near instantaneous.

6. Operating limits (including environmental conditions);

All components within the load holding system are rated to the environmental conditions acceptable for the machine; see **Section 2.2**.

7. Indications and alarms;

There are no indicators or alarms to show that the Niftylift load holding system is or is not functioning.

8. Muting and suspension of safety functions;

It is not possible to suspend the operation of the load holding system.

9. Control modes;

The load holding system has two modes of operation

- 1) Normal movements of the booms cause the system to constantly adjust the cylinders to maintain machine position and load holding.
- 2) Manual adjustment to recover the machine under emergency conditions.

10. Maintenance; Maintenance check lists;

Normal maintenance

- Removal of air from the hydraulic system if the product is left unused for long periods of time.

11. Ease of accessibility and replacing of internal parts;

Replacement of parts should only be carried out by appropriately trained and competent persons.

If parts require replacement only replace the whole components such as hoses, hydraulic cylinders or load holding and over centre valve.

Do not attempt maintenance of hydraulic components i.e. replace seals or internal component.

Only Niftylift original and supplied parts shall be used.

12. Means for easy and safe trouble shooting;

Elevate the luffing booms and check that the cage remains level and the booms remain in their elevated position. If the cage does not remain level the system should be serviced by trained persons fully conversant with the system functionality.

13. Information explaining the applications for use relevant to the category to which reference is made;

Not applicable.

14. Checking test intervals where relevant.

Check the operation of the load holding system at the beginning of every duty cycle.

***nifty*™ Series**
Operating & Safety Instructions

niftylift